

# CP1200


## KEYLESS ENTRY SYSTEM

### INSTALLATION & OPERATION INSTRUCTIONS

#### REMOTE CONTROL OPERATION

Button	Action	Functions	Conditions
1	Press one time Press one time	a. Arm and lock doors b. Car finder	a. Ign. off b. Armed
2	Press one time Press and hold 2 sec.	a. Disarm & unlock doors b. (disarm) optional trunk release or aux.function	a. Ign. off b. Ign. off
1+2	Press 1 and 2 together	Panic	Anytime

Note: Please refer to the following operating instructions for all functions listed above.  
Please connect the red wire (power) to fuse box by car battery.

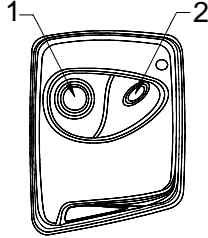

#### FEATURE SELECTION

There are four jumper selections(J1~J4).See the table as below.

**Important:** All jumper selections should to be determined before install. Otherwise, you have to power off the module again to reset.

JUMPER Feature	MODE	Feature	MODE	Feature
J1: DOOR UNLOCK DOUBLE PULSE	J 4 J 3 J 2 J 1	NO	J 4 J 3 J 2 ●	YES
J2: IGN. AUTO LOCK/UNLOCK	J 4 J 3 J 2 J 1	YES	J 4 J 3 ● J 1	NO
J3: <b>DO NOT REMOVE J3</b>	J 4 J 3 J 2 J 1		J 4 J 3 J 2 J 1	
J4: PASSIVE ARMING	J 4 J 3 J 2 J 1	NO	● J 3 J 2 J 1	YES

#### FEATURES

##### CODE LEARNING

- Turn IGN OFF/ON ( OFF then ON as one cycle) 10 cycles and stay at IGN ON within 10 seconds. Siren will chirp 3 times to enter code learning mode. Then press any button on the first remote control within 10 seconds the siren will chirp once, and press any button on the second remote control the siren will chirp once. Now the remotes are programmed.
- If a new remote control is to be programmed, all existing remote controls must be reprogrammed at the same time. Up to 3 remote controls can be programmed.

##### LOCKING/ARMING

- Press button 1.
- Parking light will flash once.
- Doors locked
- LED will flash slowly.
- Disables engine starter (if optional relay connected).

##### UNLOCKING/DISARMING

- Press button 2.
- Parking lights will flash 2 times.
- Doors will be unlocked.
- Enables engine (if optional relay connected).
- If the automatic arming feature is 'ON' , anytime when the doors are closed, the LED will flash quickly and after 30 seconds countdown the system will automatically rearm and Lock Doors.

##### EMERGENCY DISARMING - OVERRIDE

- In armed mode, if remote control failed or lost, insert the key and turn IGN OFF/ON ( Off then on as 1 cycle) for 5 cycles and stay ON, within 10 sec. This process must be done within 10 seconds.

##### CAR FINDER

- System armed, Press button 1 once parking lights will flash 10 times.
- Press button 2 to stop and disarm.

##### LAST DOOR Passive ARMING

Turn the IGN key OFF, leave the vehicle, close entrances, LED starts fast flashing, the system will count down for 30 seconds, the alarm will be automatically armed and doors locked.

##### OPEN TRUNK (Optional)

In disarm and ignition OFF mode: press button 2 and hold for 2 sec to open trunk or activate aux. function.

 
##### AUTO IGNITION LOCK/UNLOCK

- Turn ignition ON, the doors lock automatically after 10 sec. if all doors are closed.
- Turn ignition OFF, the doors unlock automatically.

#### INDICATIONS

##### LED STATUS

- Armed: LED flashes slowly at 1 per sec.
- Passive arming mode: LED flashes quickly.
- Valet mode: LED solid ON.



# INSTALLATION GUIDE CP1200

