

MEGATRONIX – ES2 – DUAL STAGE DUAL ADJUST ELECTRONIC SHOCK SENSOR WIRING

RED WIRE – POWER: CONNECT TO POWER 12 VOLTS.

BLACK WIRE – GROUND: CONNECT TO CHASIS GROUND.

BLUE WIRE – TRIGGER: CONNECT TO NEGATIVE TRIGGER INPUT OF ALARM (DO NOT CONNECT TO DOOR TRIGGERS). IF INPUT ALREADY BEING USED ON ALARM THEN DIODE ISOLATE EACH CONNECTION.

GREEN WIRE – WARN-AWAY: CONNECT TO WARN-AWAY INPUT OF ALARM OR TO EXTERNAL SOUNDING DEVICE (SUCH AS BEEPER OR SIREN).

MOUNTING: MOUNT SENSOR ON FLAT SURFACE USING SELF TAPPING SCREWS OR STRAPPING IT WITH NYLON CABLE TIES TO WIRING HARNESS.

SENSITIVITY: USE FLAT-BLADE SCREWDRIVER. TO ADJUST TRIGGER (ZONE 2) TURN DIAL COUNTER-CLOCKWISE TO MAKE LESS SENSITIVE, TURN CLOCKWISE TO MAKE MORE SENSITIVE. USE SAME METHOD TO ADJUST WARN-AWAY TRIGGER (ZONE 1).

TESTING: CLOSE ALL DOORS AND WINDOWS THEN TAP VEHICLES BODY PANELS WITH PALM OF YOUR HAND OR A RUBBER A Mallet. IF SIREN DOES NOT SOUND, ROTATE ADJUSTMENT 1/8TH OF TURN CLOCKWISE TO INCREASE SENSITIVITY. REPEAT UNTIL SIREN SOUNDS TO YOUR DESIRED SETTING. RED LED WILL ILLUMINATE WHEN SENSOR IS TRIGGERED. GREEN LED WILL ILLUMINATE WHEN WARN-AWAY IS TRIGGERED.

WWW.MEGATRONIXUSA.COM

MEGATRONIX – ES2 – DUAL STAGE DUAL ADJUST ELECTRONIC SHOCK SENSOR WIRING

RED WIRE – POWER: CONNECT TO POWER 12 VOLTS.

BLACK WIRE – GROUND: CONNECT TO CHASIS GROUND.

BLUE WIRE – TRIGGER: CONNECT TO NEGATIVE TRIGGER INPUT OF ALARM (DO NOT CONNECT TO DOOR TRIGGERS). IF INPUT ALREADY BEING USED ON ALARM THEN DIODE ISOLATE EACH CONNECTION.

GREEN WIRE – WARN-AWAY: CONNECT TO WARN-AWAY INPUT OF ALARM OR TO EXTERNAL SOUNDING DEVICE (SUCH AS BEEPER OR SIREN).

MOUNTING: MOUNT SENSOR ON FLAT SURFACE USING SELF TAPPING SCREWS OR STRAPPING IT WITH NYLON CABLE TIES TO WIRING HARNESS.

SENSITIVITY: USE FLAT-BLADE SCREWDRIVER. TO ADJUST TRIGGER (ZONE 2) TURN DIAL COUNTER-CLOCKWISE TO MAKE LESS SENSITIVE, TURN CLOCKWISE TO MAKE MORE SENSITIVE. USE SAME METHOD TO ADJUST WARN-AWAY TRIGGER (ZONE 1).

TESTING: CLOSE ALL DOORS AND WINDOWS THEN TAP VEHICLES BODY PANELS WITH PALM OF YOUR HAND OR A RUBBER A Mallet. IF SIREN DOES NOT SOUND, ROTATE ADJUSTMENT 1/8TH OF TURN CLOCKWISE TO INCREASE SENSITIVITY. REPEAT UNTIL SIREN SOUNDS TO YOUR DESIRED SETTING. RED LED WILL ILLUMINATE WHEN SENSOR IS TRIGGERED. GREEN LED WILL ILLUMINATE WHEN WARN-AWAY IS TRIGGERED.

WWW.MEGATRONIXUSA.COM