

# MEGALARM®

## MEGA 2000

2-WAY LCD REMOTE ENGINE  
STARTER WITH KEYLESS ENTRY

Operation Manual



**MEGATRONIX**  
CALIFORNIA, U.S.A.



**WARNINGS:**

As with any product that performs automatic functions, there are certain safety precautions that you must practice and be aware of.

1. Keep the transmitter out of children's reach.
2. Do not leave anyone in the vehicle while running on remote control.
3. Alert servicing personnel that the vehicle can be started automatically.
4. Do not start the vehicle by remote while it's in an enclosed area or garage.
5. Always apply the parking brake and lock the vehicle as you exit the vehicle.
6. The vehicle windows must be rolled up.
7. Should the unit malfunction, disconnect the fuse until the problem is corrected.
8. The use and operations of this system is the sole responsibility of the operator.
9. Some areas may have local ordinances that prohibit leaving a vehicle running on public streets.
10. Do not start the vehicle by remote while the standard transmission vehicle is parked at a steep place.

**OPERATION:**

**A. REMOTE TRANSMITTER OPERATION:**

Transmitter Button	System Function	Remark
	Lock Doors & Arm System	
-	Arm and Delete The 2 Stage Shock Sensor	Press twice within 3 seconds
-	Arm System and Hidden Alarm Function	Press within 3 seconds
	Car Locator	Upon armed
(3-second)	Panic function	Press and Hold for 3 seconds.
+	Silent Arming / Disarming	Ignition in "off" position.
+  (2-second)	Active Anti Car-Jacking Mode	Ignition in "on" position press and hold for 2 seconds
	Unlock Doors & Disarm System	
-	Two Steps Door Unlock & Disarm System	Press twice within 3 seconds.
(2-second)	Trunk Release (Channel 3)	Press and Hold for 2 seconds
-	Passive Arming By-pass	While the system Disarmed.
* - *	Activate or Turn Off The Remote Start	Press twice within 3 seconds.
+ *	Turbo Time Mode	
+	Channel # 4 Timer Output	

**B. LED INDICATORS:**

LED	Function
Off	Disarmed
Slow Flash	Armed
Fast Flash	Passive Arming
On (Solid)	Valet Mode

LED	Function
2 flashes... pause	Zone 2 / Trigger on Trunk/Hood
3 flashes... pause	Zone 3 / Trigger on Door Switch
4 flashes... pause	Zone 4 / Trigger on Shock Sensor
5 flashes... pause	Zone 5 / Trigger on Ignition Switch

**C. CHIRP INDICATORS:**

Chirp	Function
1 chirp	Arm
2 chirps	Disarm
3 chirps	Ajar Warning
4 chirps	Disarm / Triggered
6 chirps	Car Locator


**D. PARKING LIGHT:**

Parking light	Function
1 flash	Arm
2 flashes	Disarm
3 flashes	Disarm / Triggered
12 flashes	Car Locator
Constant On	Under Remote Start


**E. ALARM OPERATING CONDITION:**

	Siren / Horn	Parking Light	LED	Doors	Starter	Dome Light
1. Arming	1 or 3 Chirps	1 Flash	Slow Flash	Locking	Disable	
2. Disarming	2 or 4 Chirps	2 or 3 Flashes		Unlocking		Turns on for 30 -second
3. Trigger	Alarming	Flashes	Slow Flash		Disable	Flashes
4. Panic	Alarming	Flashes				Flashes
5. Car-Jacking	Alarming	Flashes			Disable	Flashes
6. Car Locator	6 Chirps	12 Flashes		Locking		


## F. ACTIVE ARMING – LOCK & ARM:

1. Press  button on the transmitter.
2. The siren will chirp once and parking light will flash once indicating that the system is now armed. The vehicle door will lock and dome light turns on for 10 seconds upon arming when interfaced with the security system.


**System Arm**

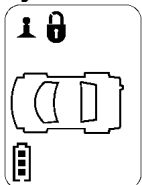

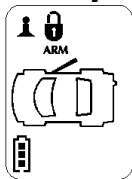

**Door Ajar**



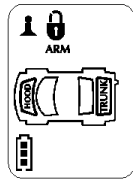


**Trunk / Hood Ajar**



**AJAR WARNING:** If the siren sounds 3 chirps, then you have left a door, trunk, or hood lid ajar. (See Alarm Feature “1 - 4” Programming)

**SILENT ARMING / DISARMING:** Press the transmitter  and  buttons at the same time will arm or disarm your security system, No chirp sound will be heard, arm / disarm confirmation will be through the vehicles parking lights only.

**SHOCK SENSOR BY-PASS:** Press the  button on the transmitter two times within 3 seconds will arm the security system and by-pass the shock sensor. The system will chirp one additional time to confirm the sensor bypass mode was activated. The sensor bypass feature is programmed to activate for one arming cycle only. The security system will return to normal operation during the next arming cycle.

**HIDDEN ALARM FUNCTION:** Press the  button first; within 3 seconds press the  button to activate the hidden alarm function. The security system will arm and with “Hidden Alarm Function”. The siren / horn will be silenced even if the sensor is triggered in the armed status.




## G. PASSIVE ARMING

Active arming / disarming is controlling your security system via the remote transmitter. This security system is equipped with an optional Passive Arming feature, which allows the security system to arm 30 seconds after the last door is closed. Operation is as follows.


1. Turn the ignition to the “OFF” position and exit the vehicle.
2. After all entrances are closed, the security system LED will flash fast for 30 seconds. If you reopen any door / hood / trunk, the security system LED will stop flashing. It will begin flashing again once the vehicle all entrances are closed.
3. After 30-second timer has elapsed, the security system will automatically “ARM”. The siren will chirp [1] time and the parking lights will flash [1] time.

**PASSIVE ARMING WITH PASSIVE DOOR LOCKING** (See Alarm Feature “1 - 2” Programming):


The vehicle doors will automatically lock after passive arming cycle has been completed.

**PASSIVE ARMING BY-PASS:** While the system disarmed, Press the  button twice, the security will respond with [1] chirp and LED will turn “ON”. The security system will remain in this temporarily state for as long as you wish. To exit passive by-pass, press the transmitter  or  button and the system will return to normal status.


## H. ACTIVE DISARMING – UNLOCK & DISARM:

1. Press  button on the transmitter.
2. The siren will chirp **once** and parking light flash **once** to indicating that the security system is now disarmed. The vehicle’s door will unlock and dome light turns on for 30 seconds upon disarming when interfaced with the security system.


**System Disarm**

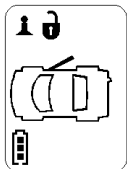


**Trunk/Hood Trigger**

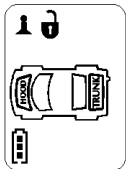


**Doors Trigger**

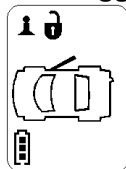

**Shock Sensor Trigger**

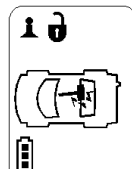


**Ignition Trigger**

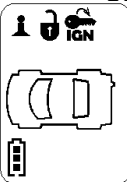

**TAMPER DISARMING:** If alarm triggered, upon disarm the system, siren chirp 4 times, parking light flash 3 times.

**PATHWAY ILLUMINATION** (See Alarm Feature “II - 4” Programming): This feature turns the parking light “ON” for 30 seconds upon a unlock signal and for 10 seconds upon the lock signal.

**TWO STEPS DOOR UNLOCK** (See Alarm Feature “II - 1” Programming): This feature will independently unlock the driver’s door only when disarming the security system. Pushing the  button a second time within 3 seconds will unlock the other doors.

**AUTOMATIC RE-ARM** (See Alarm Feature “I - 3” Programming): If this feature is selected, the security system will automatically re-arm itself in 60 seconds after disarming with remote transmitter. Automatic rearm will cancel if any door is opened before the 60 seconds timer has elapsed.

## I. DISARMING WITHOUT A TRANSMITTER ( Alarm Feature II - 6 Programming )

**OVERRIDES THE ALARM WITHOUT PASSWORD PIN CODE:** (Factory Default Setting)

The Override function may be used if the remote transmitter is lost or inoperative.

1. Enter the vehicle and turn the ignition switch to 'ON' position. (Alarm will sound.)
2. Within 10 seconds push and release the valet switch

The alarm will stop sounding and enter the disarm mode. You can now start and operate the vehicle normally.

**OVERRIDE THE ALARM WITH PASSWORD PIN CODE:** (Alarm Feature II - 6 Programming)

Unlike valet switch easily found, and defeated, this security system allows the consumer to program a password pin code. Offering a higher level of security.

1. Enter the vehicle and turn the ignition switch to 'ON' position. (Alarm will sound.)
2. Within 5 seconds, enter your chosen of the first digit code by press and release the Valet Switch.  
(When finished above procedures, system's siren stop alarming, parking light stop flashing, but the vehicle cannot be start and drive away.)
3. Within 15 seconds of the last digit code enter (the 1st code), turn the Ignition Switch “OFF” and then “ON”.
4. Within 15 seconds, enter your chosen of the second digit code by press and release the Valet Switch.
5. Turn the ignition switch “OFF” position. [4] Chirps form siren/horn, [3] flash from parking light to indicate the system was disarmed.

**Note:** You must override the alarm within 60 seconds. If not, the system will automatically re-arm.

**EXAMPLE: To Override The System With The Password Code 83, you would;**

1. Enter the vehicle and turn the ignition switch to 'ON' position. (Alarm will sound.)
2. Within 5 seconds, Press and Release the Valet Switch 8 times  
(When finished above procedures, system's siren stops alarming, parking light stop flashing, other sensor stop trigger, but the vehicle can not be start and drive away.)
3. Within 15 seconds of the last digit code enter (the 1<sup>st</sup> code), turn the Ignition Switch “Off” and then “ON”.
4. Within 15 seconds, Press and Release the Valet Switch 3 times
5. Turn the Ignition Switch to “Off” position. [4] Chirps form siren/horn, [3] flash from parking light to indicate the system was disarmed.

## J. VALET MODE: (System in Disarm or Valet mode)

The valet switch allows you to temporarily bypass all alarm function, eliminating the need to hand your transmitter to parking attendants or garage mechanics. When the system is in valet mode, all alarm function and remote start functions are bypassed, however the remote panic feature and remote door locks will remain operational. To use the valet mode, the system must first be disarmed either by using you remote transmitter, or by operating the Manual override sequence.


**Enter Valet Mode:**

1. From the disarmed condition, turn the ignition to “ON” position.
2. Push and hold valet switch for 2 seconds until the LED turns on. The LED will remain on as long as the system is in 'valet mode'.


**Exit Valet Mode:**

1. Return to normal operation, turn ignition 'on'.
2. Push and hold valet switch for 2 seconds, The LED wills turns off indicate the system are exiting the valet mode.


**Remote Door Lock**

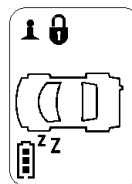

**Remote Door Unlock**

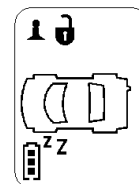

 
 

 

 


## K. CAR LOCATOR

Under armed mode, press the  button to active car locator function. The siren will chirp 6 times. The parking light will flash 12 times, for you to easily locate your car.

## L. PANIC FUNCTION:

The transmitter can be used as a remote panic switch to manually trigger the alarm in case emergency.

1. Press and hold the  button for 3 second. The alarm will immediately sound.
2. During panic mode, the normal function of this transmitter button will be suspended. The transmitter  and  buttons can be used to lock and unlock the door (if the option is installed), however once the  button is pressed, the vehicle's starter disable device, (where installed) will be enable allowing the vehicle to start.
3. To stop the alarm, press and hold the transmitter  or  button on the transmitter again for 3 seconds. Also if any transmitter buttons other than  or  button is pressed and released, the panic mode will be turned off immediately.
4. If the button is not pressed, the alarm will automatically stop after 30 seconds.


## M. TRIGGER THE SYSTEM

When armed, your vehicle is protected as follows:

1. Light impact will trigger the warn-away signal.
2. Heavy impacts / Doors open / Hood open / Trunk open / Turn on the ignition key will trigger the programmed sequence.

The starter disable relay (if installed) prevents the vehicle's starter from cranking. The siren, horn, parking lights, and dome light will turn on to alerting of an intrusion for 30 seconds. Then it will stop and automatic reset and re-arm. If the one of sensors or detectors still active, the alarm system will sound a maximum of 6 times of 30 seconds cycles.

#### Trunk/Hood Trigger    Doors Trigger    Shock Sensor Trigger    Ignition Trigger    Warn-Away Trigger

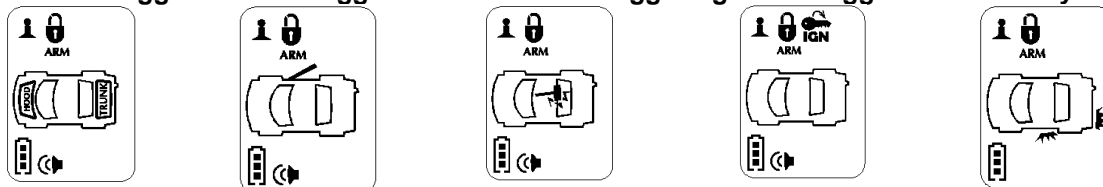

## N. ANTI CAR- JACKING

**Warning:** If you don't need the car jacking function in this alarm system, be sure to set car jacking feature "OFF". This system is default setting all car-jacking "OFF". (See Alarm Feature I - 5 Programming.)

### ACTIVE ANTI CAR JACKING:

1. Press and hold the transmitter and buttons at the same time for 2 seconds while the vehicle's ignition is ON. The parking lights will turn on for 1.5 seconds to indicate the system enters the car-jacking mode.
2. Once the system is in car-jacking mode, if you are forced from the vehicle, the system will be triggered when the door is opened and closed while the ignition is "ON".

### PASSIVE ANTI CAR- JACKING:

1. Turn the ignition switch to "ON" position; the system enters the car-jacking mode.
2. Once the system is in car-jacking mode, if you are forced from the vehicle, the system will trigger when the door is opened and closed while the ignition is "ON".

### TRIGGER THE ANTI CAR -JACKING MODE:

- a). 50 seconds after the system has been triggered. The siren will start chirping for 15 seconds.
- b). During this 15 seconds period of chirping, you will be alerted to push the valet switch once to turn off the car-jacking feature. If not, it will enter second timer car jacking.
- c). 65 seconds after the system has been triggered. The siren starts alarming and the parking light starts flashing.
- d). 90 seconds after the system has been triggered
  1. The siren still alarming and the parking light flashing, and
  2. The starter disable will activate to prevent the vehicle from starting.
  3. It will remain active until the vehicle's battery power is exhausted.

### OVERRIDE THE SYSTEM TO TURN OFF ANTI CAR- JACKING:

Turn the ignition switch from OFF to ON, and within 10 seconds push valet switch, the siren will stop and the system will disarm.

**Note:** If you use a password pin code to double protect the vehicle security, you will need to use it to completely disarm the system.

## O. DOME LIGHT CONVENIENCE DELAY & SUPERVISION

The alarm has a unique feature which will turn on your vehicle dome light as follows:

1. Upon disarming, the interior light will remain on for 30 seconds.
2. If the vehicle is intruded, the interior light will flash for the same duration as the siren.

Note: Turn on the ignition switch or arm the alarm will turn off the dome light.

## P. IGNITION CONTROL DOOR LOCK/UNLOCK. (See Alarm Feature II - 2 Programming.)

If the vehicle's door locks have been interfaced to the security system, the system will automatically lock the vehicle's doors when the ignition is turned "ON" and /or unlock the vehicle's doors when the ignition is turned "OFF".

## Q. TRUNK RELEASE (CHANNEL 3) OUTPUT.

Press and hold button on the transmitter for two seconds to remote control the trunk release or other electric devices.


## R. CHANNEL 4 TIMER CONTROL OUTPUT (See Alarm Feature III - 4 Programming.)

Press the transmitter and buttons at the same time to activate Channel 4 function. Channel 4 is a user-programmable timer output. You may program the built-in timer to send a ground signal for any time duration from 1 second to 120 seconds. For instance, this timer output may be used to turn on the headlight, power window or sunroof. (Factory default setting at momentary output.)

## S. DRIVER PAGING / LOSE & FOUND (For two-way transceiver operation only)

It is useful the event that someone wants to page the driver of the parked vehicle or someone cannot find his LCD remote control transceiver.

Under the ignition switch "off" condition, press and hold the valet switch for 2 seconds to page the driver, one chirp sound shall be emitted from the vehicle and the paging melody sound continues sounding from you Remote LCD transceiver and "📞" indication flashes on the LCD screen.

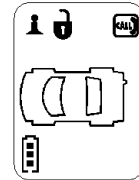

**T. OUT OF RANGE INDICATION:** (See Alarm Feature II – 5 Programming.)

If this feature is selected, the system will automatically check the range every 30 minutes after armed.

1. If user is within the range, the 📶 icon will display on the LCD screen.
2. If user is out of range, it has five short "bi" sounds and the 📶 icon will disappear on the LCD screen.

**Note:** Programming "out of range indication" will decrease the life expectancy of battery

**U. POWER ON MEMONRY:**

This security system is equipped with circuitry that will allow the unit to remember its alarm state if the power is lost and then reconnected.

**REMOTE START OPERATION:**

**A. TO REMOTE START THE VEHICLE:**

1. Press \* button twice on the transmitter.
2. The parking light will activate to indicate the remote start received the signal.


(A melody sounding from your Remote LCD transceiver and "IGN" icon will flashes on the LCD screen to confirm the remote start was activated.)

3. The engine will start approximately 5 seconds.
4. Once the engine is running, after couple seconds the parking light will turn on again and climate controls will activate and adjust the vehicles interior temperature to your preset setting. (While the vehicle is running, the "🔥" icon on the LCD screen will flash and it will indicate count down timer based on the 5, 10, 20 or 30 minute run time set up by your installation center.)
5. The vehicle will run for 5 to 30 minute cycle and automatically shut down. (When the unit shuts off the count down timer will turn off and the transmitter will play a melody.)


**Note:** The Remote Start Unit will not start the vehicle if any one of the following conditions exists:

1. The hood is opened.
2. The brake pedal is pressed.
3. Move the optional remote start enable toggle switch to OFF position. (If installed)
4. The gear selector is in any gear other then "PARK" or "NEUTRAL"

**Activate Remote Start**

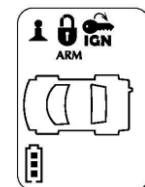

**Engine Running**

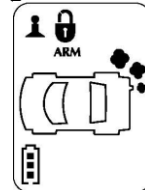

**SAFE START (Child safety mode)** (See Start Feature I – 5 Programming.)

Factory defaults setting to press the \* button twice on the transmitter to start the vehicle. Programming this feature to eliminate an accidental remote start, when kids enter this transmitter, it enquires:

The user presses the transmitter 📶 and \* buttons at the same time to start the vehicle.

**B. TO OPERATE THE VEHICLE WHILE RUNNING ON THE REMOTE START:**

To operate the vehicle while engine running on the remote start.

1. Insert the ignition key and turn it to "ON" (not the start) position.
2. Press the brake pedal.

**Note:** If the brake pedal is pressed before the key is in the ON position, the engine will shut down.

**C. TEMPORARY STOP FEATURE:**

This feature allows the vehicle to remain running after the key has been removed from the ignition. This feature is useful for occasions when you wish to exit and lock the vehicle for short periods of time, but would like to leave the motor running and the climate control on.

1. Before turning off the engine, press the \* button twice on the transmitter and the LED indicator will flash 3 times to confirm enter.
2. Turn the ignition key to OFF position. (The engine will stay running.)
3. The engine will run until the pre-programmed time elapsed or shutdown input is received.

**E. TURBO TIMER MODE:** (See Start Feature "I - 6" Programming)

Turbo timer mode keeps the engine running after arriving at you destination for a programmable period of 1/ 3 or 5 minutes, This allows the system's time to conveniently cool down the turbo after you have left the vehicle.

To activate:

1. While engine is running, place the transmission gear in the park position and pull up the hand brake.
2. Before turning off the engine, press and release 📶 and \* buttons at the same time.
  - The parking light will turn on to indicate the remote start has entered turbo charge mode. --
3. Pull off the "Ignition Key" from the key cylinder.

- Engine keeps running. --
- 4. Exit and secure the vehicle.
- Engine continues running until the pre-programmed time elapsed. --

**F. TIMER START:** (See Start Feature “1 - 7” Programming)

This unit can be programmed to start and run the engine every 3 (2) hours. The engine will run for the programmed running time and then shut down.


**IMPORTANT:** Timer Start should be used only in open areas, never start and run the vehicle in an enclosed space as a garage or carport.

This feature is designed for an extreme cold climate usage. The system will auto start the vehicle every 3 (2) hours, to prevent engine freezing and hard to start.

A MAXIMUM OF SIX CYCLES CAN OCCUR.

**ENTER:**

1. Press the \* button twice to remote start the vehicle. As soon as the vehicle is running and the parking light have turned on or flashing.
2. Immediately depress the button once, within 2 seconds
3. Rapidly depresses the \* button. The parking light will flash (3) times. The siren or horn chirps (3) times. The vehicle is now programmed to start every 3 (2) hours.
4. Press the brake pedal to stop the vehicle running.

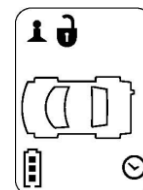

**Exit the timer start:**

Timer start can be exited manually as follows:

1. Make sure the remote start system is not operating the engine.
2. Turn the ignition on. The LED and parking light will flash (4) times. The horn chirps (4) times.

Or


1. Press the \* button twice to remote start the vehicle. As soon as the vehicle is running and the parking light have turned on or flashing.
2. Immediately depress the button then press and hold the \* button for 2 seconds. The parking light will flash (4) times. The siren or horn chirps (4) times. The vehicle is no longer programmed to start automatically.

**G. TO TURN OFF THE REMOTE START:**

When the engine is running (by remote start), if you want to stop it,

1. Press \* button twice on the remote transmitter under remote start mode.
2. Move the optional remote start enable toggle switch to OFF position. (If installed)
3. Press the brake pedal

The vehicle will shut down and turn off the parking light to indicate engine stopped.

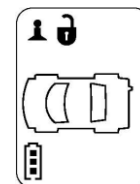

**H. SHUT-DOWN INPUT FOR REMOTE STARTER:**

If any of the following conditions exist while the system is operating, the engine will not start or will shut down immediately:


1. The hood is opened.
2. The brake pedal is pressed.
3. Engine is over-revved. {"Tachometer checking type" only}
4. The pre-programmed run time (5 / 10 / 20 / 30 minutes) has elapsed.
5. Press \* button twice on the remote transmitter under remote start mode.
6. Move the optional remote start enable toggle switch to OFF position. (If installed)
7. The vehicle refused to start running after {3} unsuccessful attempts.

**I. DISABLING THE REMOTE START SYSTEM:** (If installed)

This feature allows your system's remote start unit to be temporarily disabled to prevent the vehicle from being remote started accidentally. This feature is useful if the vehicle is being serviced or stored in an enclosed area. To disable the remote start, move the optional remote start enable toggle switch to the OFF position.




## LCD REMOTE CONTROL TRANSCEIVER:

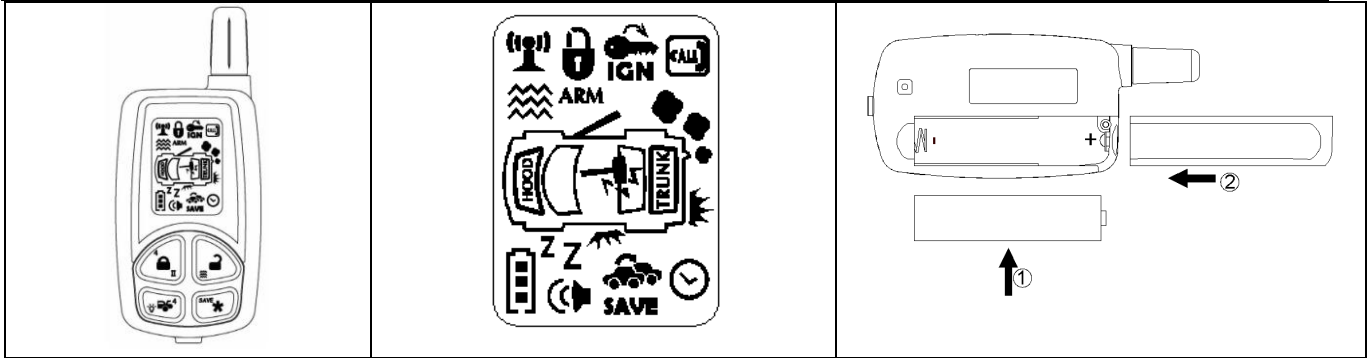




 



 






**Note:** If the system is interfered by stronger radio frequency around, sources of high voltage electric power or such Obstacles like tall buildings and so on, the transmission range may get shorter as the system uses low out put powered frequency.












### A. BATTERY REPLACEMENT:

A 1.5V type AAA Alkaline battery powers the Remote Transmitter. When the power of the battery weakens a  icon shall be displayed on the LCD screen. When the old battery is replaced to new one, there will be beep sounds indicate the power is up.

### B. REMOTE LCD ICONS WITH FUNCTION:

	<b>Door Lock</b> Your vehicle doors are locked		<b>Door Unlock</b> Your vehicle doors are unlocked and the system is Disarmed
<b>ARM</b>	<b>Armed Mode</b> Your vehicle is in armed mode		<b>Valet Mode</b> All the function shall be temporarily on hold.
	<b>Remote Transmission</b> You are transmitting the signal to control unit		<b>In – Range Indicator</b> Your are within the remote control range.
	<b>Trunk/Hood Trigger</b> Trunk or Hood is illegally opened (Zone 2)		<b>Door Open Warning</b> Doors are illegally opened (Zone 3)
	<b>Shock Sensor Trigger</b> Trigger on Shock Sensor (Zone 4)		<b>Ignition Trigger</b> Trigger on Ignition Switch (Zone 5)
	<b>Warn Away trigger</b> Trigger on Shock Sensor (Zone 1)		<b>Low Battery</b> You have to replace the battery of remote control.
	<b>Vibration Mode</b> Remote Control vibrates when the system is triggered		<b>Driver paging / Lose and Found</b> Someone is paging you in front of your vehicle
<b>SAVE</b>	<b>Power Save Mode</b> Save the battery power		<b>Engine Running</b> Your vehicle's engine is running

### C. PROGRAMMING OF THE LCD REMOTE TRANSMITTER:

Transceiver Button	System Function	Remark
 + * - 	Switching code for 2nd / 1st Car Operation	Press within 5 seconds
 + * - 	Melody / Vibration Mode	Press within 5 seconds
 + * - *	Power Save Mode	Press within 5 seconds
	LCD screen lamp turns on for 5 seconds.	
 -  + 	System's Status Check	Press within 3 seconds
 -  + *	Clear the Flash Icon and Melody Sound	Press within 3 seconds

**1. Second Vehicle Security Operation:** Your remote transmitter can be utilized to control a second vehicle security system. To program the remote control transmitter to a second vehicle, follow the instructions for Transmitter programming. All programming parameters be the same except for the following:




#### For Regular Remote Control Transmitter:


1. Prior to pushing any button on the transmitter. Press the Select  button first on the transmitter.

2. Once **||** button is pressed the LED on the transmitter will illuminate for 3.5 seconds to indicate the second transmitter pin code has built-in.
3. While the LED is illuminated, press any button on the remote control transmitter to control a second vehicle security system.




### For 2-way LCD Remote Control Transceiver:


**2nd Car Operation:** While the “||” icon display on the LCD screen, you can remote control and communicate with a second vehicle security system. It has **two** short “bi” sounds while pressing the button of the LCD screen transceiver.

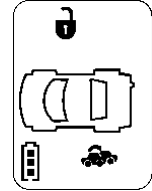1. Press and hold  and  buttons at the same time until one long beep is heard. Programming has now been entered.
2. Within 5 seconds press & hold  button until **two** beep sounds are heard & the “||” icon will display on LCD screen indicating 2nd transceiver pin code has built-in.
3. To exit programming mode, take no action for five seconds. The remote control will generate two long beeps to indicate programming mode has been exited.





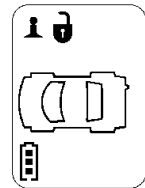


**Back to 1st Car Operation:** You can remote control and communicate with a first vehicle security system. It has **one** short “bi” sound while pressing the button of the LCD screen transceiver.

1. Press and hold  and  buttons at the same time until one long beep is heard. Programming has now been entered.
2. Within 5 seconds press and hold  button until **one** beeping sound is heard.
3. To exit programming mode, take no action for five seconds. The remote control will generate two long beeps to indicate programming mode has been exited.






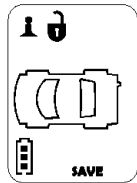
**2. Vibration / Melody Mode:** It is useful when you are in a noisy place and difficult to hear beep sound from the remote control as the remote control in this mode, vibrates it if your security system is triggered.

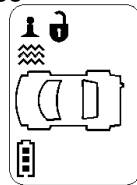
1. Press and hold  and  buttons at the same time until one long beep is heard. Programming has now been entered.
2. Within 5 seconds, press the  button to select the mode of vibration or melody, the  icon will displayed on the LCD screen to show the LCD remote transceiver is on vibration mode.
3. To exit programming mode, take no action for five seconds. The remote control will generate two long beeps to indicate programming mode has been exited.






**3. Power Save Mode:** While the power save mode, the LCD remote transceiver “sleep” until a button is pushed, extending the life of battery. When power save mode is “Off”, the remote control will wake up periodically to check for messages from the security module..


1. Press and hold  and  buttons at the same time until one long beep is heard. Programming has now been entered.
2. Within 5 seconds, press the  button to toggle “On” or “Off”. The remote will beep once for “On”, twice for “Off”. When power save mode is “On”, the **SAVE** icon on the LCD screens to indicate entry the “power save mode”
3. To exit programming mode, take no action for five seconds. The remote control will generate two long beeps to indicate programming mode has been exited.






**4. Screen Lamp ON:** Press the  button once, the LCD screen lamp will turns on for 5 seconds

**5. System’s Status Check** When you want to check the system’s present status through the LCD screen, Press the transceiver  button first, within 3 seconds press  and  buttons at the same time. It responds with one melody sound, the LCD screen should be illuminated.

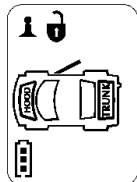**Note:** If it has no responds then you are out of range.



**6. Clear the Flash Icon and Melody Sound:** Press the  button first, within 3 seconds press  and  buttons at the same time. It will clear the flash icon and melody sound on the LCD screen transceiver

**7. Stop The Trigger Melody Sound:** While triggering the alarm the LCD screen will alert user through melody sound and flashing trigger icon, press any button on the LCD remote transmitter to stop melody sound only, the remote control buttons will not send a command to the system.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions.

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

