

MEGATRONIX – NBS6 – ALARM SIREN WITH RECHARGEABLE BATTERY BACKUP WIRING

RED WIRE – POWER: CONNECT TO POWER 12 VOLTS.

BLACK WIRE – GROUND: CONNECT TO CHASIS GROUND.

WHITE WIRE – POSITIVE TRIGGER: CONNECT TO POSITIVE (+) SIREN OUTPUT OF ALARM.

BLUE WIRE – NEGATIVE TRIGGER: CONNECT TO NEGATIVE (-) SIREN OUTPUT OF ALARM.

NOTE: USE WHITE OR BLUE (NOT BOTH) DEPENDING ON ALARM SIREN OUTPUT POLARITY.

OPERATION: TURN KEY TO GREEN DOT TO TURN SIREN ON. TURN KEY TO RED DOT TO DISABLE SIREN. SIREN SOUNDS WHEN ALARM SYSTEM ACTIVATES ITS SIREN OUTPUT WIRE.

WWW.MEGATRONIXUSA.COM

MEGATRONIX – NBS6 – ALARM SIREN WITH RECHARGEABLE BATTERY BACKUP WIRING

RED WIRE – POWER: CONNECT TO POWER 12 VOLTS.

BLACK WIRE – GROUND: CONNECT TO CHASIS GROUND.

WHITE WIRE – POSITIVE TRIGGER: CONNECT TO POSITIVE (+) SIREN OUTPUT OF ALARM.

BLUE WIRE – NEGATIVE TRIGGER: CONNECT TO NEGATIVE (-) SIREN OUTPUT OF ALARM.

NOTE: USE WHITE OR BLUE (NOT BOTH) DEPENDING ON ALARM SIREN OUTPUT POLARITY.

OPERATION: TURN KEY TO GREEN DOT TO TURN SIREN ON. TURN KEY TO RED DOT TO DISABLE SIREN. SIREN SOUNDS WHEN ALARM SYSTEM ACTIVATES ITS SIREN OUTPUT WIRE.

WWW.MEGATRONIXUSA.COM

MEGATRONIX – NBS6 – ALARM SIREN WITH RECHARGEABLE BATTERY BACKUP WIRING

RED WIRE – POWER: CONNECT TO POWER 12 VOLTS.

BLACK WIRE – GROUND: CONNECT TO CHASIS GROUND.

WHITE WIRE – POSITIVE TRIGGER: CONNECT TO POSITIVE (+) SIREN OUTPUT OF ALARM.

BLUE WIRE – NEGATIVE TRIGGER: CONNECT TO NEGATIVE (-) SIREN OUTPUT OF ALARM.

NOTE: USE WHITE OR BLUE (NOT BOTH) DEPENDING ON ALARM SIREN OUTPUT POLARITY.

OPERATION: TURN KEY TO GREEN DOT TO TURN SIREN ON. TURN KEY TO RED DOT TO DISABLE SIREN. SIREN SOUNDS WHEN ALARM SYSTEM ACTIVATES ITS SIREN OUTPUT WIRE.

WWW.MEGATRONIXUSA.COM

MEGATRONIX – NBS6 – ALARM SIREN WITH RECHARGEABLE BATTERY BACKUP WIRING

RED WIRE – POWER: CONNECT TO POWER 12 VOLTS.

BLACK WIRE – GROUND: CONNECT TO CHASIS GROUND.

WHITE WIRE – POSITIVE TRIGGER: CONNECT TO POSITIVE (+) SIREN OUTPUT OF ALARM.

BLUE WIRE – NEGATIVE TRIGGER: CONNECT TO NEGATIVE (-) SIREN OUTPUT OF ALARM.

NOTE: USE WHITE OR BLUE (NOT BOTH) DEPENDING ON ALARM SIREN OUTPUT POLARITY.

OPERATION: TURN KEY TO GREEN DOT TO TURN SIREN ON. TURN KEY TO RED DOT TO DISABLE SIREN. SIREN SOUNDS WHEN ALARM SYSTEM ACTIVATES ITS SIREN OUTPUT WIRE.

WWW.MEGATRONIXUSA.COM