

**VIKING™**

***VS 121, VS125***

ALARM SYSTEM

Operating Instructions

**MEGATRONIX**  
VAN NUYS, CA U.S.A.

## INDEX

Operating Manual.....	1
Transmitter Operation.....	1
LED Indicators.....	1
Chirp Indicator.....	1
Parking Light .....	2
Active Arming .....	2
Active Disarming .....	2
Panic Alarming .....	2
Trigger The Alarm .....	2
Transmitter Battery Replacement.....	3
F.C.C. Rules .....	3

## OPERATING MANUAL

### A. TRANSMITTER OPERATION:

Transmitter Button	System Function	Remark
Button I	Arm / Disarm	
Button I-I	Arm and Delete Shock Sensor	Press 2 Times Within 3 Seconds
Button I	Panic	Press And Hold For 3 Seconds
Button II	Car Locator	Press And Hold For 2 Seconds
Both Buttons I & II	Programming Shock Sensitivity	Upon Disarm Within 10 Seconds, Press Both Buttons For 2 Seconds Then Press Button II
Both Buttons I & II	Programming Siren Tone	Upon Disarm Within 10 Seconds, Press Both Buttons for 2 Seconds, Then Press Button I

### B. LED INDICATORS:

LED	Function
Off	Disarmed
Slow Flashing	Armed
1 Flash ..... Pause	Intrusion on current sensor
2 Flashes ..... Pause	Intrusion on pin switch
3 Flashes ..... Pause	Intrusion on shock sensor

### C. CHIRP INDICATORS:

Chirp	Function
1 chirp	Arm
2 chirp	Disarm
4 chirp	Disarm / Intrusion

**D. PARKING LIGHT:**

Parking light	Function
1 flash	Arm
2 flash	Disarm
3 flash	Disarm / Intrusion

**E. ACTIVE ARMING:**

Press the button I on the transmitter.  
The siren will chirp once, 3 seconds later the system will be fully armed.

**F. ACTIVE DISARMING:**

Press the button I on the transmitter.  
The siren will chirp twice to indicate that the alarm is disarmed.  
TAMPER DISARMING : When you disarm the alarm, if the alarm had been triggered, the siren will chirp 4 times and the parking lights will flash 3 times.

**G. PANIC ALARMING:**

The transmitter can be used as a remote panic switch to manually trigger the alarm in case of an emergency. To do so, hold down the button I on transmitter for over 3 seconds and the alarm will be triggered, the siren will begin to sound and the lights will flash. Press button I again to stop panic alarming.

**H. TRIGGER THE ALARM:**

After 5 seconds while the alarm is armed, opening the doors, smashing vehicle body or window or towing the vehicle, will trigger the alarm and sound the siren for 30 seconds alerting of an intrusion. Then it will stop, automatically reset and re-arm.

**I. TRANSMITTER BATTERY REPLACEMENT:**

If the range of your transmitter deteriorates, it is possible that you need to replace the battery.

1. Release the screw from the back of the transmitter and remove upper transmitter case with a phillips screwdriver.
2. Remove old battery from transmitter.
3. Install a new battery (12Volt) noting the (+) and (-) marks in the battery area of the transmitter.
4. Reclose upper transmitter case with care.
5. Tighten the screw on the back of the transmitter.

**F.C.C. RULES:**

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions.

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.