


CP1100

KEYLESS ENTRY SYSTEM

INSTALLATION & OPERATION INSTRUCTIONS

REMOTE CONTROL

Button	Step	Functions	Mode
1	Press once Press once	a. Lock Doors b. Unlock doors	a. Acc off
2	Press one time Press and hold 2 sec.	a. Disarm & unlock doors b. (disarm) optional trunk release or aux.function	a. Armed b. Ign. off
1+2	Press 1 and 2 together	Panic (optional siren)	Anytime

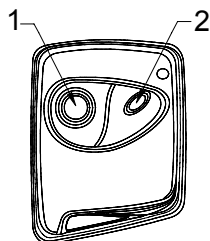

FEATURES

CODE LEARNING

- a. Turn ACC OFF/ON (OFF then ON as one cycle) 8 cycles and stay at ACC ON within 10 seconds. Siren will chirp 3 times to enter code learning. Then press any button on the remote control within 10 seconds.
- b. If a new remote control is to be programmed, all existing remote controls must be reprogrammed at the same time. Up to 3 remote controls can be programmed.

LOCKING/ARMING

- a. Press button 1.
- b. Siren will chirp 1 time.
- c. Parking light will flash once.
- d. Doors locked at 0.5sec or 3.5 sec (See Jumper Selection J1).
- e. LED will flash slowly.
- f. Disables engine starter (if relay connected).

UNLOCKING/DISARMING

- a. Press button 1.
- b. Siren will chirp 3 times.
- c. Parking lights will flash 3 times.
- d. Doors will be unlocked at 0.5sec or 3.5sec.
- e. Enables engine (if kill starter relay connected).

EMERGENCY DISARMING - OVERRIDE

- a. In armed mode, if the remote control failed or lost, insert the ignition key and turn the IGNITION 'OFF/ON' (Off then ON as a cycle) for 5 times and leave it 'ON', within 10 sec.
- b. The optional siren will sound 4 times and the system disarmed. This process must be finished within 10 seconds.

PANIC

- a. Press button 1+2, the optional siren will sound, and parking lights will flash for 30 seconds.
- b. Pressing button 1 or 2 will stop the panic.

CAR FINDER

- a. Alarm in locked/armed mode.
- b. Press button 2: the optional siren will sound once and parking lights will flash 10 times.
- c. Press button 2 : car finder in silent mode (parking lights will flash 10 times but without siren sound)
- d. Press button 1 to stop it.

OPEN TRUNK

In unlocked/disarmed and ignition OFF mode: press buttons 2 hold 2 sec to open trunk.

VALET

- a. When IGN 'ON', Turn the IGN. 'OFF/ON' (OFF then ON as one cycle) 3 cycles and stay at IGN 'ON', within 8 sec.
- b. Enter valet mode, LED will be constantly ON even when the IGN is 'OFF'.
- c. In valet mode, siren chirps twice and parking lights will flash twice when locked/armed.
- d. Disable valet mode: When IGN 'ON', Turn IGN 'OFF/ON' (OFF then ON as one cycle) 3 cycles. Then the LED will be OFF after 8 sec.

AUTOMATIC REARMING

When the alarm is disarmed, if the ACC is not turned ON or doors not opened, after 30sec the alarm will automatically be rearmed.

AUTO LOCK/UNLOCK

- a. Turn the ignition OFF; the door unlocks automatically.
- b. Turn the ignition ON; the door locks automatically after 10 sec.

Note: 1. Turn ignition ON while door is open, the auto lock is invalid.
2. Auto lock is invalid if any door is opened during the 10 sec of countdown of Auto lock function.

MEMORY FUNCTION

The Alarm will memorize the condition when the power is cut off.

FUNCTION SELECTION

There are four jumper selections (J1~J4). See the table below.

Important: All jumper selections have to be determined before installation. Otherwise, you have to power off the module again to reset.

JUMPER	MODE	FUNCTION	MODE	FUNCTION
J1: LOCK TIMER		0.5 SEC		3.5 SEC
J2: AUTO LOCK/UNLOCK		YES		NO
J3: ANTI CAR-JACKING		YES		NO
J4: LAST DOOR ARMING WITH DOOR LOCK		NO		YES

OPERATION INDICATORS

LED STATUS

- a. LOCKED/ARMED: LED flashes slowly as 1 time per sec.
- b. Re-arming mode: LED flashes quickly.
- c. Valet mode: LED ON constantly.

REV: B1002

INSTALLATION GUIDE

MODEL: CP1125

