

# MEGALARM®

## MEGA 3700

2-WAY LCD REMOTE ENGINE  
STARTER AND CAR ALARM SECURITY

Installation Manual



**MEGATRONIX**  
CALIFORNIA, U.S.A.




## INTRODUCTION

### INSTALLER WARNINGS


This Remote Starter with Alarm System is designed to be installed on fuel injected vehicles with an automatic transmission ONLY.

- Never install this remote starter on a manual transmission vehicle.
- This system must be installed and wired through a safety switch it will not start in any forward or reverse gear.
- Some automatic transmission vehicle [mainly older GM vehicles with a purple starter wire] have a mechanical-type park safety switch instead of electrical safety switch. The mechanical type does not interrupt the starter circuit when the transmission is any gear and does not offer the 100% level of safety required for remote starting purposes. Therefore, our system should never be installed on any vehicle that uses a mechanical type park safety switch.
- Once you install this system, you must verify that the vehicle will not start any forward or reverse gear. Regardless of the type of vehicle.
- Read operation manual for operating and programming routine.
- Do not install any component near the brake, gas pedal or steering linkage.
- Some vehicles have a factory installed transponder immobilizer system that can severely complicate the installation. There is possibility that this system can not be installed on some immobilizer equipped vehicles.
- Most vehicles have an SRS air bag system. Use extreme care and do not probe any wires of the SRS system.
- Disconnect the car battery before connecting work on the vehicle.
- Check behind panels before drilling any holes. Ensure that no wiring harness or other components are located behind the panels that would otherwise be damaged.
- Use conventional crimp lock, bullet on any wiring. Poor wiring, i.e. taped joints will possibly introduce unreliability into the alarm system and may result in false alarms or incorrect operation.
- Install wiring neatly under carpets or behind trim to prevent possible damage to wires.
- For the wire operates the current more than 10A. We suggest soldering all connection point. Do not use crimp lock type connectors or wire nuts.

# INSTALLATION DIAGRAM

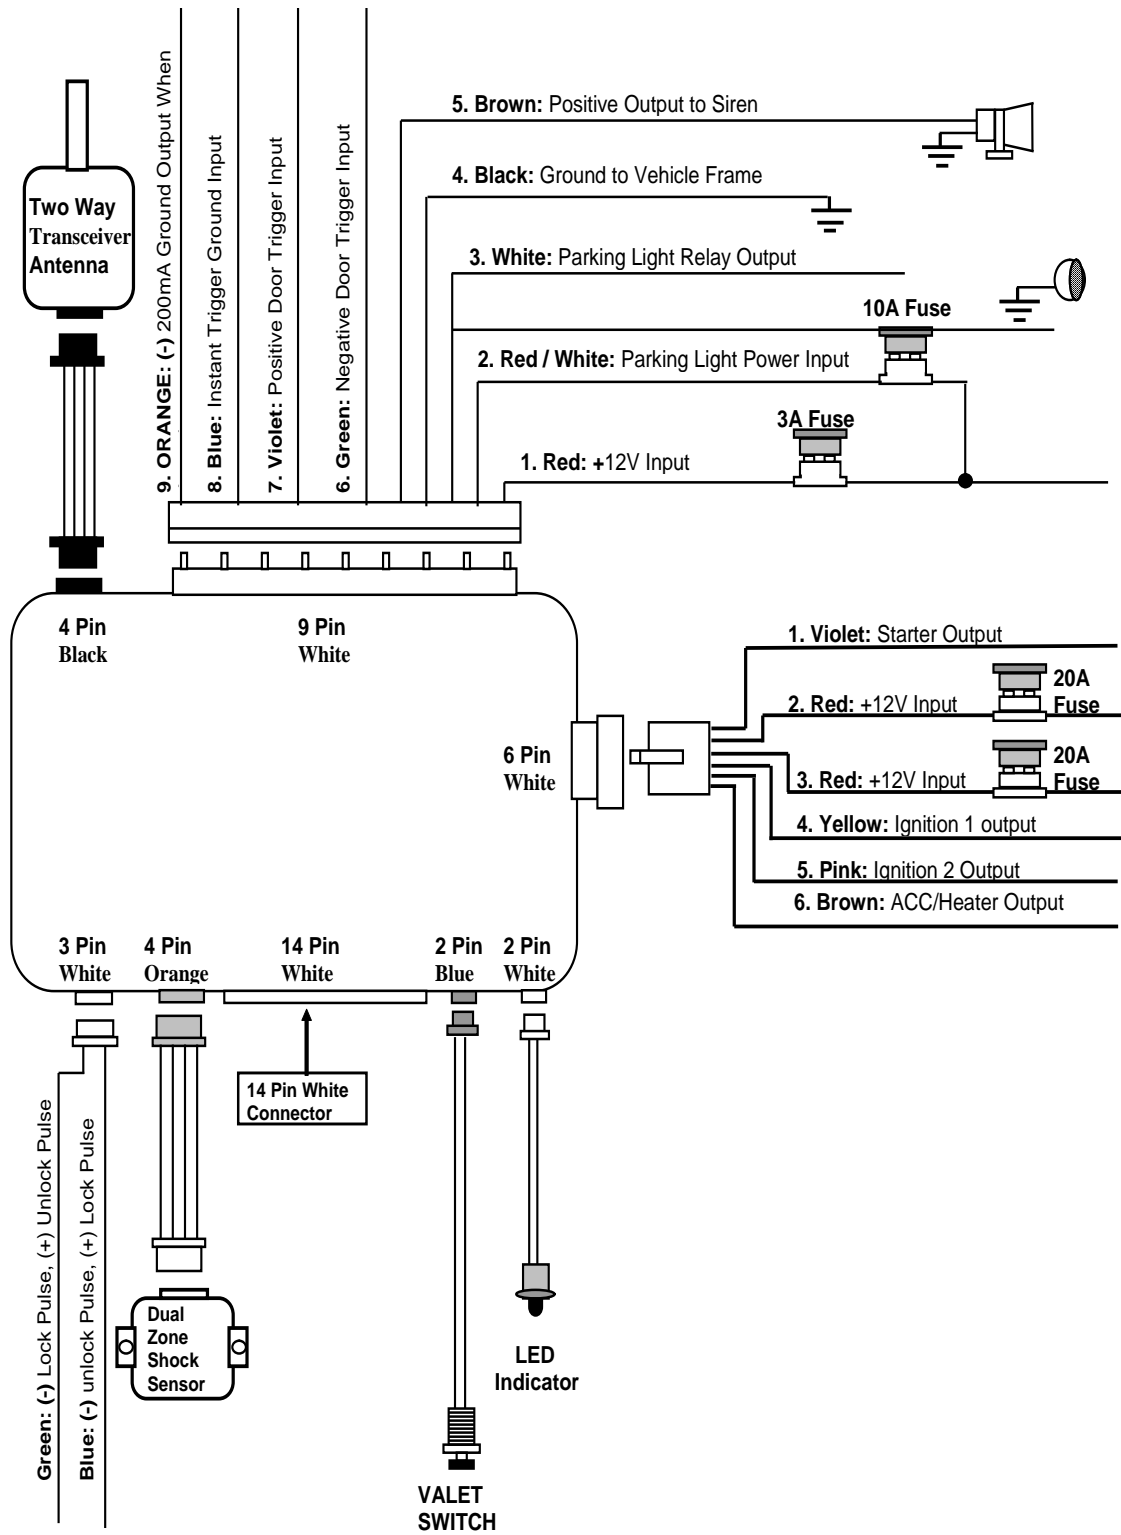

## 14 PIN WHITE MINI CONNECTOR:

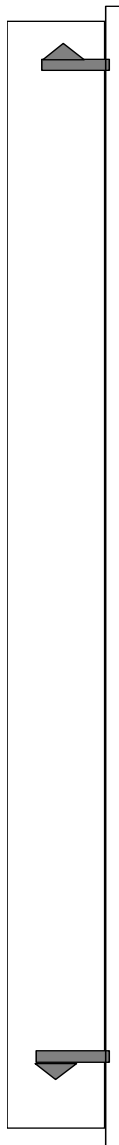

1. <b>White / Violet</b> Wire: (+) Positive Safety Shut Down Input for Brake switch.
2. <b>Black/White</b> Wire: (-) Neutral Safety Switch Input & (-) Remote Start Toggle Switch Input
3. <b>White / Blue</b> Wire: (-) Instant Start and Turn Off Input
4. <b>White / Black</b> Wire: (-) Negative Safety Shut Down Input for Hood pin switch
5. <b>White / Red</b> Wire: Tach. Signal Input
6. <b>Yellow</b> Wire: (-) 200mA Ignition 3 Control Output
7. <b>Black / Violet</b> Wire: (-)200mA Channel 6 Programmable Output
8. <b>Brown / White</b> Wire: (-) 200mA Programmable Output 1. Horn Output (Factory Default Setting) or 2. Factory Security Rearm Signal Output
9. <b>White</b> Wire: (-) 200mA Dome Light Control Output
10. <b>Black / Red</b> Wire: (-) 200mA Channel 5 Programmable
11. <b>Black / Green</b> Wire: (-) 200mA Programmable Output 1. Channel 4 Programmable Output (Factory Default Setting) or 2. . Ground Output During Start (Crank)
12. <b>Gray</b> Wire: (-) 200mA Channel 3 (Trunk)
13. <b>Pink</b> Wire: (-) 200mA Programmable Output 1. 2 Steps Door Unlock Output (Factory Default Setting) or 2. Factory Security Disarm Signal Output or 3. Start Status (Shock Sensor By-Pass Control) Output
14. <b>Orange / White</b> Wire: (-)200mA Grounded Output When

**IMPORTANT NOTE:** Directly connect the BLACK/WHITE wire to the “GROUND” when this wire is not used.

## WIRING

Keep wiring away from moving engine parts, exhaust pipes and high-tension cable. Tape wires that pass through holes on the firewall to prevent fraying. Watch out for sharp edges that may damage wires and cause short circuit.

CAUTION: Do not connect the wire harness to the control module until all wiring to vehicle is complete.

### 6 PIN HEAVY GAUGE WIRING CONNECTIONS:

Remember that the system does to start a vehicle is duplicate the functions of the ignition key switch! Below, we will explain the three basic functions of the ignition switch. Since this installation will require analysis of the ignition switch functions, we recommend making the three connections below at the ignition switch harness directly.

#### Violet wire – Starter Output –

Careful consideration for the connection of this wire must be made to prevent the vehicle from starting while in gear. Understanding the difference between a mechanical and an electrical Neutral Start Switch will allow you to properly identify the circuit and select the correct installation method. In addition you will realize why the connection of the safety wire is required for all mechanical switch configurations.


Failure to make this connection properly can result in personal injury and property damage.

In all installations it is the responsibility of the installing technician to test the remote start unit and assure that the vehicle can not start via RF control in any gear selection other than park or neutral.

In both mechanical and electrical neutral start switch configurations; the connection of the VIOLET wire will be made to the low current start solenoid wire of the ignition switch harness. This wire has +12 volts when the ignition switch is turned to the "START" (CRANK) position only. This wire has 0 volts in all other ignition switch positions.

NOTE: This wire must be connected to the vehicle side of the starter cut relay (when used). For the electrical neutral switch configuration, this connection must be made between the starter inhibit relay (when used) and the neutral safety switch as shown in the following diagram.

Failure to connect this wire to the ignition switch side of the neutral safety switch can result in personal injury and property damage. SEE NEUTRAL START SAFETY TEST FOR FURTHER DETAILS.

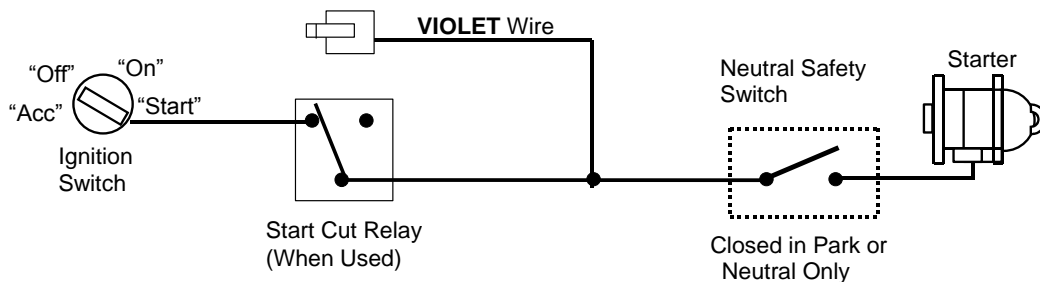

#### Red wire – +12V Power Input –

Remove the two 20A fuses prior to connecting these wires and do not replace them until the satellite has been plugged into the control module. These wires are the source of current for all the circuits the relay satellite will energize. They must be connected to a high current source. Since the factory supplies (+) 12V to the key switch that is used to operate the motor, it is recommended that these wires be connected there.

Note: If the factory supplies two separate (+) 12V feeds to the ignition switch, connect one RED wire of the satellite to each feed at the switch.

#### Yellow wire – Ignition Output –

Connect the YELLOW wire to the ignition wire from the ignition switch. The ignition wire should receive "12 volts" when the ignition key is in the "ON" or "RUN" and "START" or "CRANK" position. When the ignition is turned "OFF", the ignition wire should receive "0" voltage. **The YELLOW wire must be connected.**

#### Pink wire – Ignition 2 Output

Some vehicles have [2] ignition wires that must be power. Connect the PINK wire to the ignition 2 wire from the ignition switch. The ignition wire should receive "12 volts" when the ignition key is in the "ON" or "RUN" and "START" or "CRANK" position. When the ignition is turned "OFF", the ignition wire should receive "0" voltage. If the PINK wire is not used, cap the end of the wire.

#### Brown wire – Accessory Output (Heater /ACC Output) –

Connect the BROWN wire to the accessory wire in the vehicle that powers the climate control system.

An accessory wire will show + 12 volts when the ignition switch is turned to the "ACCESSORY" or "ON" and "RUN" positions, and will show 0 Volts when the key is turned to the "OFF" and "START" or "CRANK" position. There will often be more than one accessory wire in the ignition harness. The correct accessory wire will power the vehicle's climate control system. Some vehicle may have separate wires for the blower

motor and the air conditioning compressor. In such cases, it will be necessary to add a relay to power the second accessory wire.

### 9 PIN WIRE HARNESS:

**White wire – Parking Light Relay Output (10A power output) –**

Connect the WHITE wire to the parking light wire coming from the headlight switch. Do not connect the WHITE wire to the dashboard lighting dimmer switch. (Damage to the dimmer will result). The limitation of the WHITE wire is 10 AMP max. Do not exceed this limit or damage to the alarm and parking relay will result.

**Red / White wire – Parking Light Relay Power Input –**

The RED/WHITE wire is the input to the flashing parking light relay. The connection of the RED/WHITE wire will determine the output polarity of the flashing parking light relay.

If the vehicle you are working on has +12volt switched parking light, you don't need connect this wire. This wire already connected to +12 volt.

If the vehicle's parking light are ground switched, cut the RED/WHITE wire, connect the RED/WHITE wire to chassis ground.

**Red wire – System Power (+12V Constant) –**

The RED wire supplies power to the system. Connect this wire to a constant +12 volt source.

**Brown wire – Siren Drive Output –**

This is the positive (+) output connection for the siren. Current capacity is 2 amps. Make connection to the (+) red wire from the siren. Make the (-) black wire coming from the siren to a good chassis ground.

**Black wire – System Ground –**

This is main ground connection of the alarm module. Make this connection to a solid section of the vehicle frame. Do not connect this wire to any existing ground wires supplied by the factory wire loom, make the connection to the vehicle's frame directly.

**Green wire – Negative Door Switch Sensing Input –**

This wire is the ground trigger input wire for negative door pin switch. This wire is connection for "grounding" type factory door pins locate the "common wire" that connects the door pin switches. Make the connection of the GREEN Wire here.

**Violet wire – Positive Door Switch Sensing Input–**


This wire is the positive trigger input wire for positive door pin switch. This wire is connection for "positive" type factory door pins (typical FORD MOTOR). Locate the "common wire" for all door pins and make the connection of the VIOLET Wire here.

**Blue wire – Ground Instant Trigger Input –**

This wire is the ground trigger input wire for hood/trunk pin switches.

**Orange wire – (-) 200mA Grounded Output When Armed –**

This wire will become grounded when the alarm is armed. The current capacity of this wire is 200mA. This output can control starter disable, when an intrusion is detected and the system is triggered. The vehicles prevent from any unauthorized starting.

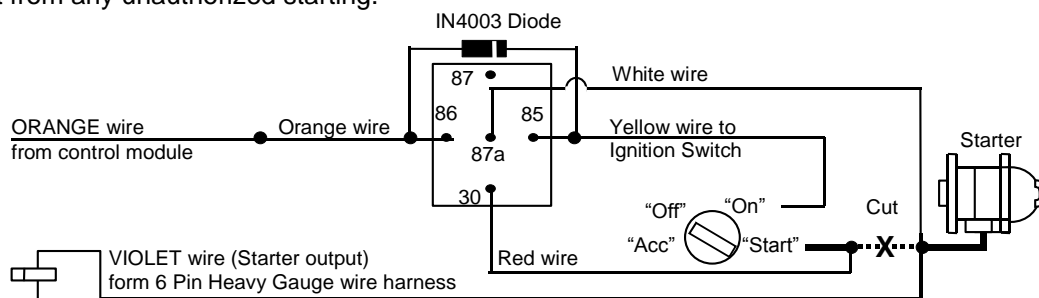


### BLACK 4-PIN CONNECTOR. – TWO-WAY TRANSCEIVER/ANTENNA MODULE

The Two-way transceiver/antenna mounts on the location above the belt line (dashboard) of the vehicle for best reception. We suggest you mount it on the lower left or upper left-hand side of windshield.

**Warning!** Do not mount in such a manner that it obstructs the driver's view.

- Remove the protective tape backing.
- Carefully align the two-way transceiver/antenna and apply to windshield.
- Route the black connector wire behind the trim and connect to the two-way transceiver/antenna.
- Connect the other end to the control module.
- Special considerations must be made for windshield glass as some newer vehicles utilize a metallic shielded window glass that will inhibit or restrict RF reception. In these vehicles, route the two ways transceiver/antenna module away from metallic shielded window glass as far as possible.

### 4 PIN ORANGE CONNECTOR FOR 2 STAGE SHOCK SENSOR

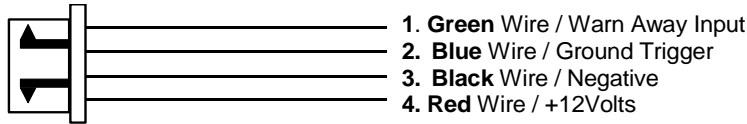

**2 PIN WHITE CONNECTOR FOR THE LED STATUS INDICATOR:**

The led indicator status should be mounted in a highly visible area such as top of the dashboard, on top of the shifter console or on dashboard face. Leave at least 6mm space behind the mounting location for LED housing. Once a suitable location is chosen, drill a 6mm hole. Run the LED wires through the hole then press the 2 pin LED housing into the place. Route the LED wires to the control module.


**2 PIN BLUE CONNECTOR FOR THE VALET SWITCH:**

Select a mounting location for the switch that is easily accessible to the driver of the vehicle. The switch does not have to be concealed, however, concealing the switch is always recommended, as this provides an even higher level of security to the vehicle. Mount the valet switch in a hidden but accessible location. Route the valet switch wires to the control module.

**14 PIN MINI WHITE CONNECTORS:**

White / Violet wire – Positive Safety Shut Down Input –

This wire provides an instant shutdown for the remote start, whenever it gets +12volts. If the brake lights switch in the vehicle switches +12 volts to the brake light circuit, connect this wire to the output side of the brake switch. This will allow the remote start to shut down if an attempt is made to operate the vehicle without the key while running under the control of the remote start. In most vehicles, in order to shift gear, the brake pedal must be depressed. The brake input will in turn cause the remote start unit to shut off. See below diagram.

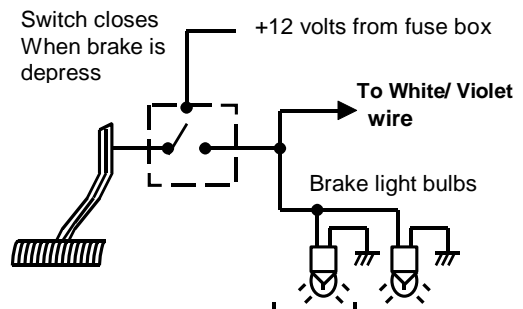

Black/White wire – (-) Remote Start Enable Toggle Switch Input –

– (-) Neutral Safety Switch Input –

When the BLACK/WHITE wire is grounded, the remote start unit is operable. When this wire is open from ground, the remote start is disable.

1. The optional “remote start toggle switch” can be added on to temporarily disable the Remote Start Device, it can prevent the vehicle from being remote started accidentally. This feature is useful if the vehicle is being serviced or stored in an enclosed area. To disable the remote start, move the optional remote start enable toggle switch to the OFF position. To enable the remote start, move the optional remote start enable toggle switch to the ON position.
2. If needed, This wire can connect to the PARK/NEUTRAL switch in the vehicle. (See the TESTING YOUR INSTALLATION GUIDE)


**IMPORTANT NOTE: Directly connect the BLACK/WHITE wire to the “GROUND” when this wire is not used.**

White / Blue wire – (-) Instant Start & Turn Off Input –(See Start Feature 9 Programming)

This wires activates and turns off the remote starter each time it sees a momentary ground signal. Normally only used for testing during installation or when activating the module from an after-market system.

White / Black wire – Negative Safety Shut Down Input –

The WHITE/BLACK wire provides an instant shutdown for the remote start, whenever it is grounded. Connect the wire to the hood pin switch previously installed. This wire must be routed through a grommet in the firewall and connected to the hood pin switch. If the pin switch is to be used with an alarm system, connect this wire with diode.

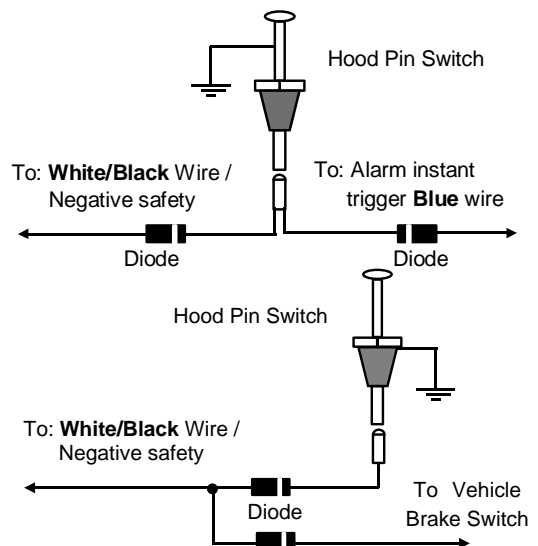

**Important!** This connection is a safety wire and must be connected as shown and tested as specified. Failure to do so may result in personal injury or property damage. See detail of wiring in the following diagram. This wire may also be used if the vehicle brake light circuit switches ground to the brake lights. An isolation diode must be used for ground switched brake light circuits and must be connected to the output of the brake switch.



## White / Red wire – Tach. Signal Connection –

Note: You should connect this wire if you program the Start Feature **3** to “Engine checking TACH.”, otherwise not to connect this wire and tap the end.

Note: No connection of this wire is required, if you use the voltage or timer checking type mode.

This input provides the remote start system with information about the engine’s revolutions per minute (RPM). It can be connected to the negative side of the coil in vehicle with conventional coils. In multi-coil and high energy ignition system locating a proper signal may be more difficult. Once connected, To test for a tach. wire, a multi-meter capable of test AC voltage must be used. The tach. wire will show between 1V and 6V AC at idle, and will increase as engine RPM increases. In multi-coil ignition system, the system can learn individual coil wire. Individual coil wires in a multi-coil ignition system will register lower amounts of AC voltage. Also, if necessary, the system can use a fuel injector control wire for engine speed sensing. Common locations for a tach. wire are the ignition coil itself, the back of the gauges, engine computers, and automatic transmission computers.

**IMPORTANT!** Do not test tach. wires with a test light or logic probe. The vehicle will be damaged.

How to find a tachometer wire with your multi-meter

1. Set the ACV or AC voltage (12V or 20V is fine.)
2. Attach the (-) probe of the meter to chassis ground.
3. Start and run the vehicle.
4. Probe the wire you suspect of being the tach. wire with the red probe of the meter.
5. If this is the correct wire the meter will read between 1V and 6V.

**IMPORTANT NOTE: You must program the “Tach Signal” before trying to remote start.**


## Yellow wire – (-) 200mA Ignition 3 Output –

This wire provides a 200mA (-) ground output that becomes active 4 seconds before the remote start unit initialize, and remains grounded while running.

### Ignition 3 output:

Some newer vehicles use a third ignition wire which is required to start and keep the vehicle’s engine running. If this is the case, wire an IGN 3 relay (not supplied) as shown below:


Do not connect any vehicle circuits together, they are isolated for a reason.

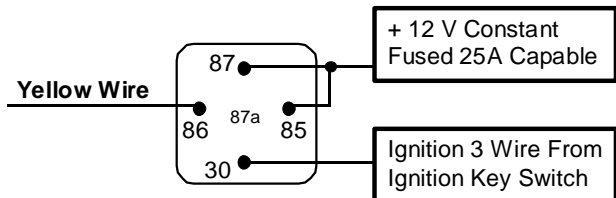

## Transponder interfacing using relay:

If the vehicle has transponder system installed, you will need to by-pass the system while the vehicle is operating under the control of the Remote Start Unit. To do this:


1. You will need a transponder key that’s already programmed to the vehicle.
2. Remove the trim around the ignition switch.
3. Wrap a thin (28 - 30awg) wire tightly around ignition switch 6 to 8 times and secure it.
4. About 6" down line make another loop of approximately 2" diameter.
5. Place the key inside this loop and secure it to the loop.
6. Connect on end of the (28 - 30awg) wire to pin (87) of the relay module.
7. Connect the other end of the loop wire to Pin (30) of relay module.
8. Connect the pin (86) of the relay module to the ignition wire from the ignition switch.
9. connect the pin (85) of the relay module to the yellow wire of 14-pin mini white connector.

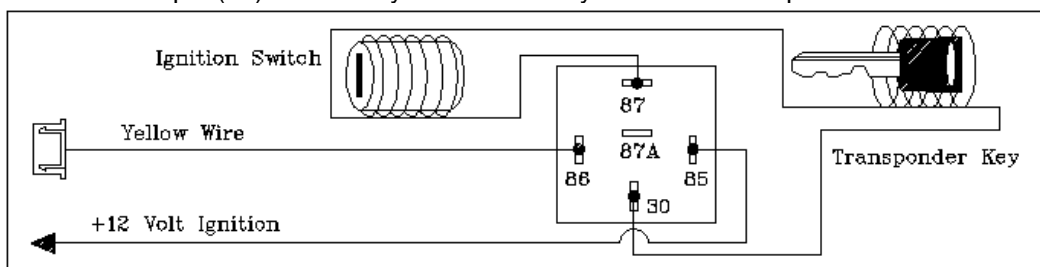

## GM VATS KEY OVERRIDE:

If the vehicle has the General Motor VATS system installed, you will need to by-pass the system while the vehicle is operating under the control of the Remote Start Unit. To do this:

1. Measure the resistance of the resistor pellet on the ignition key then select a resistor within 5% of the key’s value.
2. Locate the pair of VATS wires in the vehicle, usually a pair of thin gauge wires running from the ignition switch to the VATS control module.
3. Connect the YELLOW wire from Remote Start Unit to TERMINAL #85 of an external relay. Connect terminal #86 of the relay to a fused +12 volt.
4. Cut (#1) wire (as shown), and connect the ignition switch side of the cut wire to terminal #87a of the relay. Connect the other side of the (#1) wire to terminal #30.
5. Connect the previously selseed resistor from terminal #87 to the second(#2) wire (as shown).

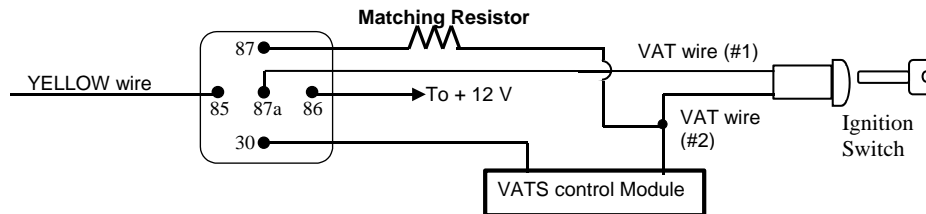

**Black / Violet wire – (-) 200mA Timer Control Channel 6 Output –**

(See Alarm Feature **11** Programming) (Factory default setting on momentary grounded)

This wire is built-in user-programmable timer output provides a ground through this wire. Press the transmitter and buttons at the same time. You may program the built-in timer to send a ground signal for any time interval between 1 second and 2 minutes. For instance, this timer output may be used to turn on the headlight with the remote control. Also on certain BMW, Mercedes Benz, Jaguar and Volkswagen cars, you can use this unique timed output to allow remote closure of all power window and sunroof without the need for an external module!

**Brown / White wire – (-) 200mA Programmable Output (See Start Feature **10** Programming) –**

**Horn Output – (Factory default setting)**

This wire is provided to use the existing vehicle's horn as the alarm system's optional's warning audible device. It's a transistorized low current output, and should only be connected to the low current ground output from the vehicle's horn switch. When the system is triggered, the horn will sound.

**Factory Security Rearm Signal Output –**

This output is programmable. If programmed rearm a factory installed security system. This wire will supply a pulse whenever the remote start times out or is shut down using the transmitter and remote door locking..

**White wire – (-) 200mA Dome Light Control Output –**

This wire becomes grounded when the dome light controls circuit active. The current capacity of this wire is 200mA. This wire can control the operation of the interior lights. An optional 10 Amps relay can be used to this system for interior lights operation.

a). Upon disarming, the interior lights will remain on for 30 seconds.

b). If the vehicle is violated, the interior light will flash for the same duration as the siren.

**Black / Red wire – (-) 200mA Programmable Channel 5 Output –**

(See Alarm Feature **10** Programming) (Factory default setting on momentary grounded)

This wire is built-in user-programmable timer output provides a ground through this wire. Press the transmitter and buttons at the same time.

**Black / Green wire – (-) 200mA Programmable Output –**

**Channel 4 Output (See Alarm Feature **9** Programming) (Factory default setting on momentary grounded)**

This wire is built-in user-programmable timer output provides a ground through this wire. Press the transmitter and buttons at the same time.

**Ground Output During Start (Crank)**

This wire will provide a 200 mA ground output while the starter output of the remote start unit is active. This output can be used to activate the Crank Low/Bulb Test wire found in some GM vehicles. This wire is also referred to as the ECM wake up wire in some vehicles.

**Gray wire – (-) 200mA Channel 3 Output –**

This will become a 1 second pulse ground by activate channel 3 on transmitter for two seconds, the current capacity of this wire is 200 mA. This feature allows you to remote control trunk release or other electric device.

**Pink wire – (-) 200mA Programmable Output (See Alarm Feature **8** Programming) –**

**2 Steps Unlock Output – (Factory default setting)**

The 2 steps unlock feature will work for the most fully electronic door lock circuit. The vehicle must have an electronic door lock switch (not the lock knob or key switch), which locks and unlocks all of vehicle's doors. When wired for this feature, press the disarm (or unlock) button one time will disarm the alarm and unlock the driver's door only. If, press disarm (or unlock) button two times within 3 seconds, the alarm will disarm and all doors will unlock.


**Factory Security Disarm Signal Output –**

This wire is designed to disarm a factory installed security system. This wire sends a negative (-) 1 seconds pulse upon a remote start and remote door unlocking. Some factory systems must be disarmed to allow remote starting. In most cases, this wire may be connected directly to the factory alarm disarm wire. The correct wire will show negative ground when the key is used to unlock the doors or trunk. This wire is usually found in the kick panel area in the wiring harness coming into the car body from the door.


**Start Status (Shock Sensor By-Pass Control) Output–**

This wire is designed to by-pass shock sensor module. This wire will supply an output at all times the remote start is operating plus an additional 3 seconds after the remote start unit turn off.


Orange / White wire – 200mA Grounded Output when Disarmed – N.O. Disable –  
 This wire will become grounded when the alarm is disarmed. The current capacity of this wire is 200mA. It can be connected to optional Ignition disable relay / ECU disable relay / Fuel Pump disable relay.

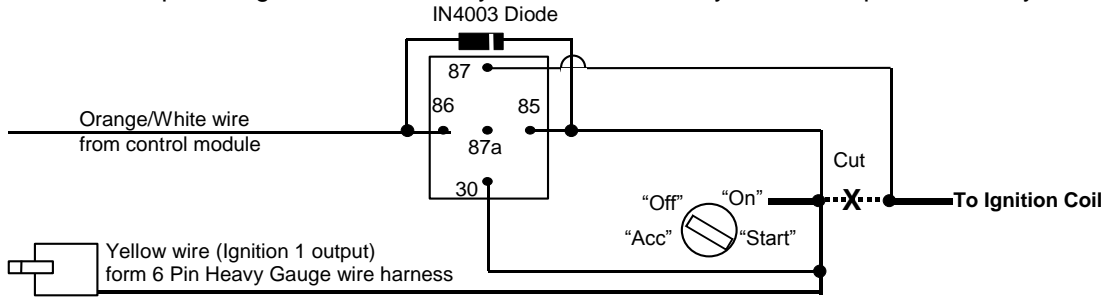


**3 PIN DOOR LOCK CONNECTOR:**

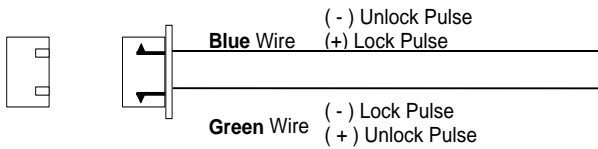


**INSTALL NEW DOOR LOCK MOTOR**

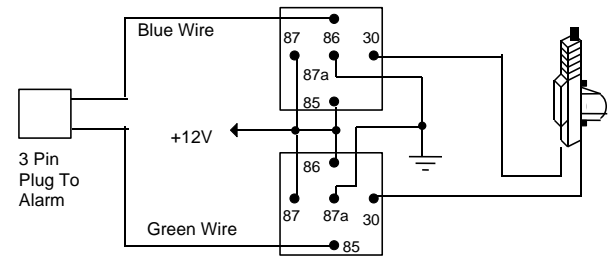


**NEGATIVE TRIGGER DOOR LOCK SYSTEM**

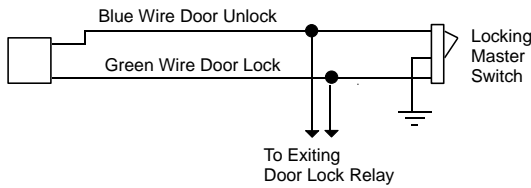


**POSITIVE TRIGGER DOOR LOCK SYSTEM**

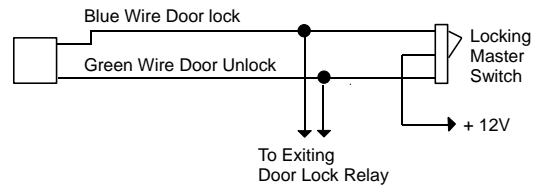


**5-WIRE ALTERNATING DOOR LOCK**

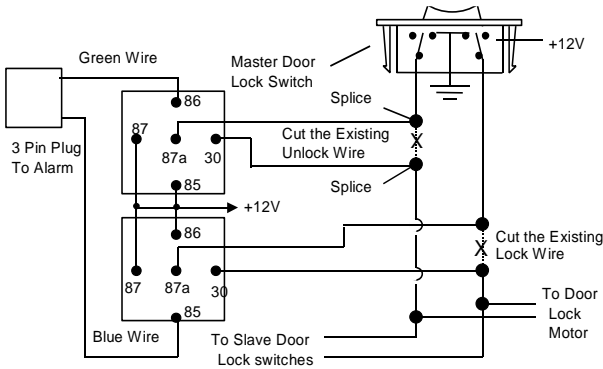


**VACUUM OPERATED CENTRAL LOCKING**

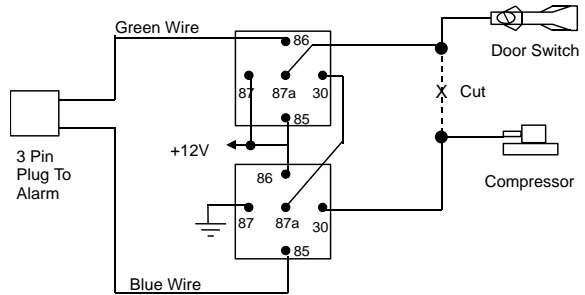

**2 STEP DOOR UNLOCK WIRE CONNECTION FOR 5 WIRE ALTERNATING DOOR LOCKS**

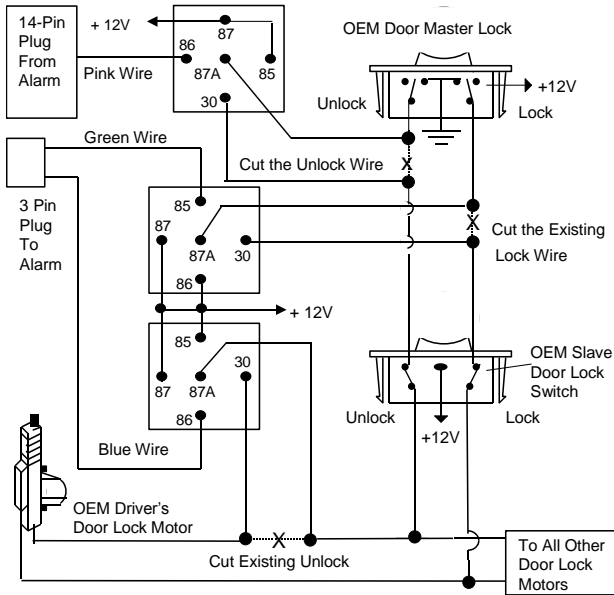


**2 STEP DOOR UNLOCK WIRE CONNECTION FOR GROUND SWITCHED DOOR LOCKS**

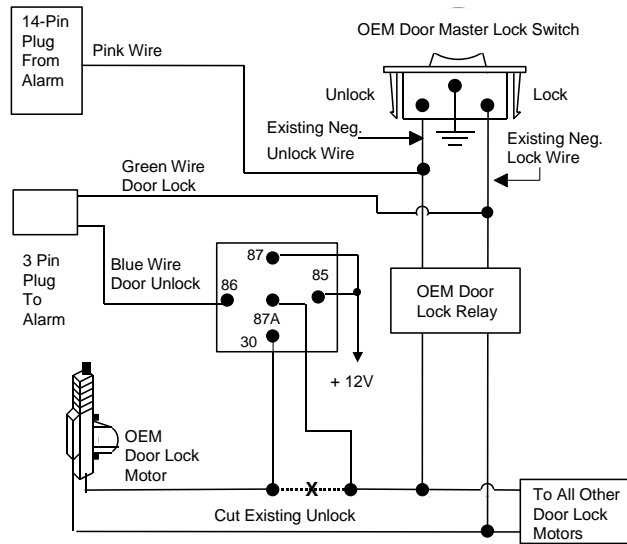

**VACUUM OPERATED DOOR LOCKING SYSTEM: TYPICAL OF MERCEDES BENZ AND AUDI.**

Locate the wire under the driver's kick panel. Use the voltmeter connecting to ground, verify that you have the correct wire with the doors unlocked, the voltmeter will receive "12 volts". Lock the doors and the voltmeter will read "0 volt". Move the alligator clip to +12V and the voltmeter will receive "12 volts". Cut this wire and make connections. Be sure to program door lock timer to 3.5 seconds. (See Alarm Feature 3 Programming.)

**2 STEP DOOR UNLOCK WIRE CONNECTION FOR POSITIVE SWITCHED DOOR LOCKS**

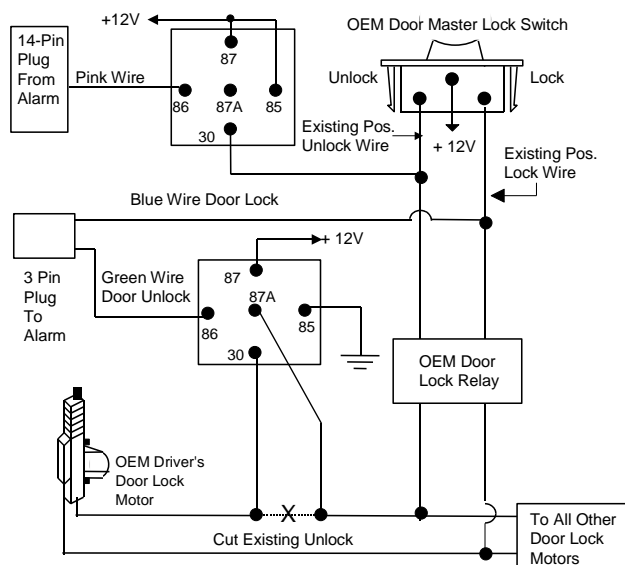

## PROGRAMMING

### A. PROGRAMMING THE REMOTE TRANSMITTER:

**Note:** This mode will only retain the last 4 remote transmitters programmed. If the transmitter memory is exceeded, the security system will start deleting transmitters from memory in chronological order.

1. Turn the Ignition 'switch 'OFF/ON' 3 TIMES and stay in ON position.
2. Within 15 seconds. push the Valet switch 3 times and holding in on 3rd push until a long chirp is hearing then release the valet switch. You are now in the Transmitter programming mode.
3. Press and hold any button of the transmitter until the siren responds with a confirming chirp, indicating the signal has been stored into memory.
4. If you have additional transmitters (up to 4) that need to be programmed, repeat step 3 for each transmitter.

**Exit:** Turn Ignition to 'OFF' position, or leave it for 15 seconds. A 3 long chirps & 3 parking light flashes to confirm exit.

### B. ALARM FEATURE PRORAMMING:

1. Turn the Ignition switch 'ON then Off 3 TIMES and stay in Off position.
2. Within 10 seconds, push and release the Valet switch 4 times and holding in on the 4<sup>th</sup> push until one long chirp from siren to confirm you are now in the Alarm feature-programming mode.

	Press  button	Press  button	Press  button	Press  button
Press and release Valet Switch	One Chirp / LED one pulse <b>Factory Default Setting</b>	Two Chirps / LED two pulses	Three Chirps / LED three pulses	Four Chirps / LED four pulses
One time	All chirps on	Siren chirp on only	Horn chirp on only	All chirps off
Two times	Active arming	Passive arming without passive door locking	Passive arming with passive door locking.	
Three times	0.8-second Door lock pulses.	3.5-second Door lock pulse.	Double pulse unlock	Door lock with "Comfort Feature"
Four times	Ignition controlled door locks & unlocks	Ignition controlled door locks only	Ignition controlled door unlocks only	Without ignition controlled door locks & unlocks
Five times	Instantly Door Ajar Warning	45 seconds delay Door Ajar Warning.		
Six times	Automatic Rearm on	Automatic Rearm off		
Seven times	Override Without Password Pin Code	Override With Password Pin Code		
Eight times	Pink Wire = Two step door unlock output	Pink Wire = Factory Security Disarm Signal Output	Pink Wire = Start Status Output	
Nine times	Black / Green Wire Channel 4 Output = Momentary output	Black / Green Wire Channel 4 Output = Latched output	Black / Green Wire Channel 4 Output = Latched output and reset with ignition "on"	Black / Green Wire =Ground Output During Start (Crank)
Ten times	Black / Red Wire Channel 5 Output = Momentary output	Black / Red Wire Channel 5 Output = Latched output	Black / Red Wire Channel 5 Output = Latched output and reset with ignition "on"	Black / Red Wire Channel 5 Output = 30 seconds timer output
Eleven times	Black / Violet Wire Channel 6 Output = Momentary output	Black / Violet Wire Channel 6 Output = Latched output	Black / Violet Wire Channel 6 Output = Latched output and reset with ignition "on"	Black / Red Wire Channel 6 Output = 30 seconds timer output

**Exit:** Turn Ignition to 'ON' position, or leave it for 15 seconds. A 3 long chirps & 3 parking light flashes to confirm exit.

**Comfort Feature:**

Some Vehicles have a special “COMFORT feature”. When you lock the door with the key, you just have to keep on turning the key on the door about 5 or 7 seconds and the window will close directly.

If your vehicle with “COMFORT feature” and you wish the door being locked and the window being closed automatically at the same time by remote control, you can set the alarm feature **3** “with comfort feature”.

**Channel 4 (5 / 6) Timer Control Output Programming.**

**Momentary output** = The momentary output selection will output a negative signal from the Channel 4 (5/6) output immediately when the channel 4 (5/6) button is pressed and will continue until the button is release.


**Latched output** = The latched output selection will output a negative signal as soon as the Channel 4 (5/6) button is pressed and will continue until the button is pressed again.

**Latched output / reset with ignition** = The latched / reset with ignition output selection operates just like the latched output but will reset or stop when the ignition is turned on.

**Ground Output During Start (Crank)** = This wire will provide a 200mA ground output while the starter output of the remote start unit is active. This output can be used to activate the Crank Low/Bulb Test wire found in some GM vehicles. This wire is also referred to as the ECM wake up wire in some vehicles.

**Start Status Output** = This wire will provide a 200mA ground output as soon as the module begins the remote start process. It can be used with a relay to disconnect a sensor from the system.


**Password Pin Code Setup:**

1. Turn the Ignition switch ‘On then Off 3 TIMES and stay in Off position.
2. Within 10 seconds, push and release the Valet switch 4 times and holding in on the **4<sup>th</sup>** push until one long chirp from siren to confirm you are now in the Alarm feature-programming mode.
3. Within 10 seconds, press and release the Valet switch 7 times again, [7] siren/horn chirp to indicate your are in features “Password Pin Code Programming mode”.
4. Within 10 seconds, begin to enter your chosen 9ths digit by pressing and releasing  button from 1 – 9 times.
5. Finish by turning the ignition switch to “On” position.

If the new password code was accepted, the unit would report back the newly entered code, by flashing the LED, The unit will report the new code three times with a one-second’s pause between each code.





Note: If 10 seconds of inactivity expire, the unit will revert back to the last successfully stored code. A [3] long chirps to confirm exit. Will revert back to the last successfully stored code


 
 
**Delete Password Pin Code / Override Without Password Pin Code (Factory default setting):**

1. Turn the Ignition switch ‘On then Off 3 TIMES and stay in Off position.
2. Within 10 seconds, push and release the Valet switch 4 times and holding in on the **4<sup>th</sup>** push until one long chirp from siren to confirm you are now in the Alarm feature-programming mode.
3. Within 10 seconds, press and release the Valet switch 7 times, [7] siren/horn chirp to indicate your are in features “Password Pin Code Programming mode”.
4. Within 10 seconds, press and hold  button for 3 seconds. A one long chirps to confirm Deleted the Password Pin Code.
5. Finish by turning the ignition switch to “On” position.

**REMOTE START FEATURE PROGRAM MODE.**

1. Turn the Ignition switch ‘On then Off 3 TIMES and stay in Off position.
2. Within 10 seconds, push and release the Valet switch 6 times and holding in on the **6<sup>th</sup>** push until two long chirp from siren to confirm you are now in the start feature programming mode.



	Press  button	Press  button	Press  button	Press  button
Press and release Valet Switch	One Chirp / LED one pulse <b>Factory Default Setting</b>	Two Chirps / LED two pulses	Three Chirps / LED three pulses	Four Chirps / LED four pulses
One time	Gasoline Engine	Diesel Engine without Wait-To-Start Light 10 seconds warn-up timer	Diesel Engine without Wait-To-Start Light 15 seconds warn-up timer	Diesel Engine without Wait-To-Start Light 20 seconds warn-up timer
Two times	10 minutes run time	20 minutes run time	30 minutes run time	5 minutes run time
Three times	Engine Checking TACH. / RPM learning mode.	Engine Checking Voltage		

Four times	Start Timer for Voltage checking type: 0.6-second	Start Timer for Voltage checking type: 0.8-second	Start Timer for Voltage checking type: 1.0-second	4 chirps = 1.2-second, 5 chirps = 1.4-second, 6 chirps = 1.6-second, 7 chirps = 1.8-second, 8 chirps = 2.0-second, 9 chirps = 3.0-second, 10 chirps = 4-second,
Five times	Low check level	Hi check level		
Six times	Factory alarm disarm with channel 3 on	Without this feature		
Seven times	Constant parking light output	Flashing parking light output		
Eight times	Door lock before start	Door lock after shut-down	Door lock before start and Door lock after shut-down	Without this feature
Nine times	White / Blue Wire = 1 pulse activate	White / Blue Wire = 2 pulse activate		
Ten times	Brown / White Wire = (-) 200mA Horn Output	Brown / White Wire = Factory Security Rearm Signal Output		
Eleven times	Temperature-Contr ol Starting OFF	Temperature-Control Starting 5F (-15C)	Temperature-Control Starting – 4F (-20C)	Temperature-Control Starting – 22F(-30C)
Twelve times	The Vehicle without Turbo	Built-in Turbo Timer Control is Active: Press  and * buttons at the same time to control Engine running one minute.	Built-in Turbo Timer Control is Active / Press  and * buttons at the same time to control Engine running three minutes.	Built-in Turbo Timer Control is Active / Press  and * buttons at the same time to control Engine running five minutes.
Thirteen times	Fahrenheit display for temperature	Celsius display for temperature		


**Exit:** Turn Ignition to 'ON' position, or leave it for 15 seconds. A 3 long chirps & 3 parking light flashes to confirm exit.

**Important Note:** The voltage “Check Level” for most vehicles would be set in “Hi Check Level”, while in “Engine Check Voltage” mode, the “Check Level” must be set at “HI” position first.

## ENGINE CHECKING TACH. / RPM LEARNING

1. Turn the Ignition switch 'On then Off 3 TIMES and stay in Off position.
2. Within 10 seconds, push and release the Valet switch 6 times and holding in on the 6<sup>th</sup> push until two long chirp from siren to confirm you are now in the start feature programming mode.
3. Within 10 seconds, press and release the valet switch 3 times again, 3 chirps to confirm the system in features “Engine Checking TACH or Voltage” mode.
4. Within 10 seconds, press and release  button on the transmitter, one chirp to confirm the system in features “RPM Learning mode”.
5. Within 10 seconds, start the vehicle with the key. (While the engine is running, the parking light & LED will flash, If don't, please check tach. **White/Red** wire connection.
6. Press and hold the valet switch for 2 seconds until a long chirp and the LED light constant for two seconds. The RPM signal is learned.
7. Press  button on the transmitter or turn the ignition switch off to exit the program mode. A 3 long chirps & 3 parking light flashes to confirm exit.


## RETURN TO FACTORY DEFAULT SETTING:

1. Turn the Ignition switch 'On then Off 3 TIMES and stay in Off position.
2. Within 10 seconds, push and release the Valet switch 9 times and holding in on the 9<sup>th</sup> push until three long chirps to confirm you are now in the “Return To Factory Default Setting” programming mode.
3. Press  button on the transmitter for 5 seconds, there will be a confirmation six chirp with one long chirp to confirm the system “ Feature Programming all returns to factory default setting.

## SHUTDOWN DIAGNOSTICS

The unit has the ability to report the cause of the last shutdown of the remote start system.

**Enter:**

1. Turn the Ignition switch to 'On' position.
2. Press the  button on the transmitter.
3. The LED will now report the last system shutdown by flashing for one minute in the following grouped patterns:

LED Flashes	Shutdown Mode	
1	(-) Safety Shutdown input (Hood)	<ol style="list-style-type: none"> <li>1. Close the hood.</li> <li>2. Check White/ Black wire connection.</li> </ol>
2	(+) Safety Shutdown input (Brake) or Neutral Safety Switch input fail	<ol style="list-style-type: none"> <li>1. Check White/ Violet wire connection.</li> <li>2. Move the Enable Toggle Switch to "ON" position. (If installed.)</li> <li>3. Move the gear selector to "Park"/ "NEUTRAL" position.</li> <li>4. Check Black/White wire connection.</li> </ol>
3	No RPM (Engine Checking TACH.) or Low Voltage. (Engine Checking Voltage.	<p>Check White/Red wire connection</p> <p>Program the "CHECK LEVEL" from "Hi Check Level" to "Low Check Level"</p>
5	Over-rev	
6	System timed out	
7	Transmitter	
8	Tach. Signal has not been learned	Re-learning the RPM (Start Feature 3)

## TESTING YOUR INSTALLATION:

**Caution!!** The follow procedure must be performed after the installation of the Remote Start Device. It is the responsibility of the installing technician to complete these tests. Failure to test the unit in the following manner may result in personal injury, property damage, or both.

1. Test the BRAKE shutdown circuit: With the vehicle in park (P), start the vehicle using the remote transmitter, Once the engine is running, press the brake pedal. The vehicle should shut down immediately. If the vehicle continues to run, check the brake circuit WHITE/ VIOLET wire connection.
2. Test the HOOD PIN shutdown circuit: Start the vehicle using the remote transmitter, Once the engine is running, pull the hood release and raise the hood. The vehicle should shut down immediately. If the vehicle continues to run, check the hood pin WHITE/ BLACK wire connection.
- 3. NEUTRAL START SAFETY TEST:**
  1. Set the vehicle parking brake.
  2. Block the drive wheels to prevent vehicle movement.
  3. Sitting in the vehicle, turn the ignition switch to "ON" or "RUN" position. But do not start the engine.
  4. Step on the brake pedal and shift the gear selector into "DRIVE" (D).
  5. Put your foot over the brake pedal but do not press down on it. Be ready to step on the brake to shut down the Remote Start Device.
  6. Start the vehicle using remote transmitter.
    - a. If the starter does not engage, the test is complete.
    - b. If the starter engages, immediately step on the brake pedal to shut down the system, recheck your VIOLET wire (starter output wire) connection. The heavy gauge VIOLET wire must be connected to the ignition switch side of the Neutral Start Switch. If the vehicle you are working on does not have an Electrical Neutral Safety Switch, it will be necessary to reconfigure the Remote Starts Wiring to accommodate this vehicle. The information concerning the Mechanical Neutral Safety Switch provided below will help you to determine if the vehicle you are working on has this type of safety switch and will provide alternate wiring methods to accommodate this situation.

**MECHANICAL NEUTRAL SAFETY SWITCH CONSIDERATIONS:**

Mechanical neutral safety switch configurations differ slightly in that they do not offer the same level of safety when installing a remote start device. Often when the ignition switch is turned off while the gear selector is in any position other than park or neutral, the mechanical function will not allow the key to be turned to the start position or be removed from the ignition cylinder. This configuration prevents mechanical operation while the vehicle is in gear but offers no consideration for electrical operation. Because of this potential problem, this installation requires the additional connection of a safety wire from the remote start device to the vehicle PARK/NEUTRAL ECM input or the vehicle key in sensor. This connection will prevent remote start operation if the key is left in the ignition switch regardless of the gear selector position.



**PARK/NEUTRAL ECM INPUT:**


The Park/Neutral ECM input is the preferred method of installation. This not only maintains the integrity of the factory circuit, it is also the easiest to install, providing the vehicle you are working on has this ECM input.

The installation required for this application (shown below), indicates in the slight reconfiguration of the control switch wiring. Shown is a typical GM Park/Neutral ECM input circuit. To connect the Remote Start unit to the GM Park/Neutral ECM input:

1. Locate the Orange/Black reference wire in the "C2" connector found at the ECM in GM B Body vehicles or, locate the equivalent reference wire in the vehicle you are installing the Remote Start Unit in.
2. Connect the BLACK/WHITE Neutral Safety Switch wire to this reference wire.

NOTE: If the optional remote starts enable toggle switch is installed, connect the one side the enable switch to this reference wire and connect the other side of the enable switch to the BLACK/WHITE Neutral Safety Switch wire of the Remote Start unit.

The reference diagram below shows a typical GM B Body ECM reference wire and how it is to be connected to the Remote Start Unit.

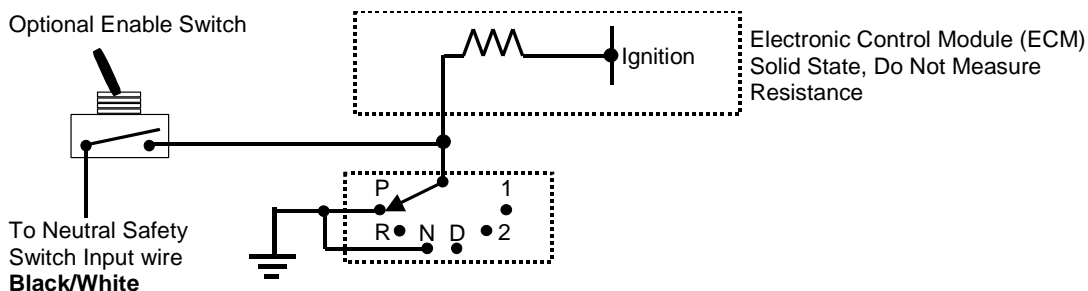

**KEY IN SENSOR CIRCUITS:**

If the vehicle you are working on does not have or you cannot locate the ECM reference wire, there are two alternatives available. Although not preferred, the vehicle Key In Sensor may be reconfigured to allow a margin of safety and will prevent the vehicle with a Mechanical Neutral Start Switch from starting in gear.

WE ADVISES THAT YOU MAINTAIN THE FACTORY CIRCUIT WHENEVER POSSIBLE. The following two circuits may be used only if the above circuit is not available.

NOTE: When completing an installation using either of the following key in sensor circuits, if the operator inserts the ignition key while the vehicle is running under the control of the Remote Start, the vehicle will shut down. This must be explained to the operator as it is in contrast to the normal operation of a vehicle utilizing an electrical neutral start switch and is inconsistent with the operators manual.


Additional information concerning Key in Sensor methods 1&2 are listed below and should be reviewed before considering either alternative.

Method 1 will allow the safety required for the remote start unit and prevent the vehicle from starting while in any gear other than Park or Neutral while the key is in the ignition cylinder however, if the key is left in the ignition switch and the door is left opened, the added relay will be energized causing a 150mA drain on the battery.

Method 2 will allow the safety required for the remote start unit and prevent the vehicle from starting while in any gear other than Park or Neutral while the key is in the ignition cylinder however, the original factory key in chime module will not alert the owner that the key has been left in the ignition switch. In addition, this may also effect other warning tones such as the light on reminder.

These situations should be carefully considered before altering the vehicle's wiring and must be fully explained to the consumer.

**METHOD 1**

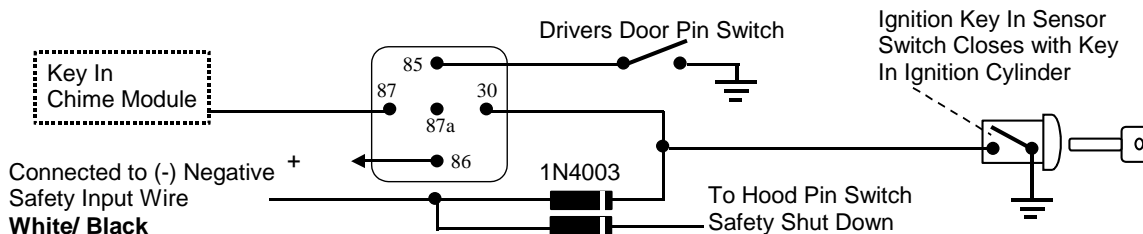


To connect to the key in sensor as shown in method 1:

- A. Locate the control wire that connects the drivers door pin switch to the key in sensor switch.
- B. Cut this wire and connect the ignition cylinder side to chassis ground.
- C. Locate the key in sensor switch wire that connects the chime module to the ignition cylinder.
- D. Cut this wire and connect the ignition cylinder side to terminal 30 of a P&B VF45F11 or equivalent relay.
- E. Connect the cathode (striped) side of a 4003 series diode to this same wire, and connect the (non striped) side to the negative safely input wire (WHITE/ BLACK) of the Remote Start Unit.

- F. Connect terminal 86 of the relay to a fused + 12 volt constant battery source.
- G. Connect terminal 87 of the relay to the Chime Module side of the previously cut wire in step D.
- H. Connect terminal 85 of the relay to the Drivers Door side of the pin switch wire previously cut in step B.

**Note:** A second 4003 series diode may be required to maintain the integrity of the hood open, shut down circuit. If this is the case, it must be installed as shown in the diagram above. The anode (Non Stripped) side must be connected to the WHITE/ BLACK wire of the Remote Start Unit. The cathode (Striped) side must be connected to the hood pin switch. If the hood pin switch is also used for an alarm trigger input, be certain to use the dual diode assembly packaged with the Remote Start Unit as shown in this installation guide.

## METHOD 2

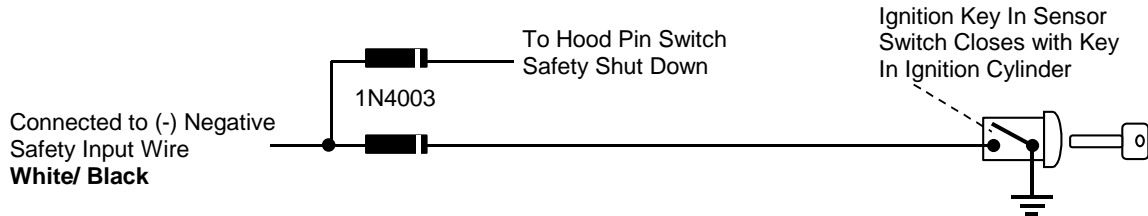

To connect to the key in sensor circuit as shown for method 2:

- A. Locate the control wire that connects the drivers door pin switch to the key in sensor switch.
- B. Cut this wire and connect the ignition cylinder side to chassis ground.
- C. Locate the key in sensor switch wire that connects the chime module to the ignition cylinder.
- D. Cut this wire and connect the ignition cylinder side to the Remote Start Negative Safety Shut down wire WHITE/ BLACK, using a 4003 series diode as shown above.

**Note:** A second 4003 series diode may be required to maintain the integrity of the hood open, shut down circuit. If this is the case, it must be installed as shown in the diagram above. The anode (Non Striped) side must be connected to the WHITE/ BLACK wire of the Remote Start Unit. The cathode (Striped) side must be connected to the hood pin switch. If the hood pin switch is also used for an alarm trigger input, be certain to use the dual diode assembly packaged with the Remote Start Unit as shown in this installation guide.

AFTER THE CONNECTION OF THE NEUTRAL START SAFETY WIRE AS INDICATED IN ANY OF THE PREVIOUS ALTERNATE CONFIGURATIONS, THIS CIRCUIT MUST BE TESTED FOR OPERATION.

Retest by following the steps outlined in the NEUTRAL START SAFETY TEST shown in this manual.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions.

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.



