


Door Lock Cable Installation

Allows you to add [door lock actuators](#) to [cable driven door lock systems](#) without damaging [the factory door lock cables](#).

- 1) Drilling two holes in the door lock lever;
- 2) Attaching the cable to the factory lock lever;
- 3) Attaching the cable to the actuator.

It lets you to mount the [door lock actuator](#) in any remote position, saves your time, and makes the job much easy.

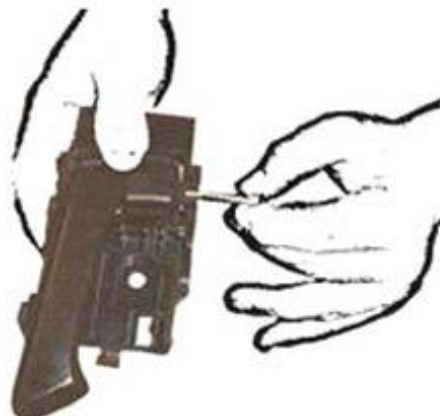

Disassemble paddle from lock assembly




Drill pilot hole in the lock lever.





Drill hole in handle assembly


Insert rod and paddle into handle assembly. (Bend to shape)

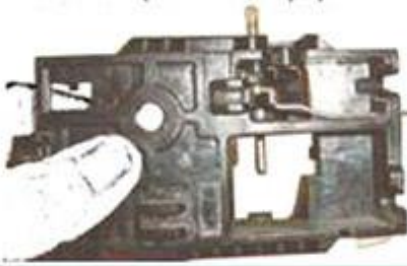

Reinsert cables from vehicle into handle assembly.

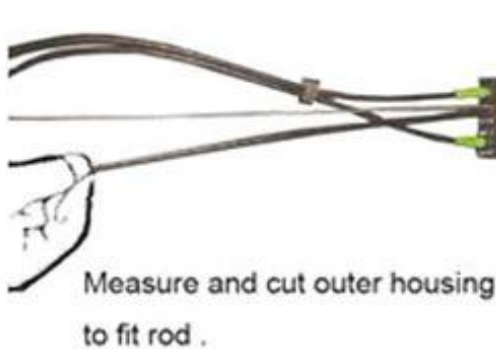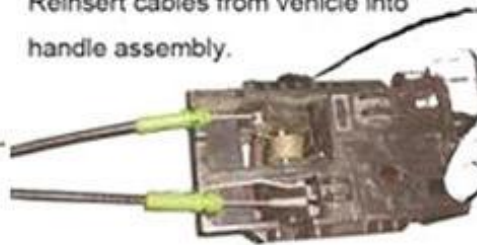

Measure and cut outer housing to fit rod .

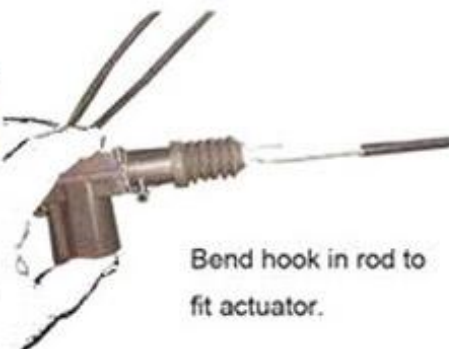

Bend hook in rod to fit actuator.



Assemble actuator and secure outer housing.