

# Megatronix – TP34 – Anti-Code Grabbing Wireless Transponder Immobilizer Security System


## Introduction

Congratulations on purchasing the **Megatronix TP34** immobilizer system. This high-tech immobilizer uses the latest in transponder technology to protect automatically your vehicle from theft. Once installed, disarming of the immobilizer is fully automatic and requires no action on the part of the user. It has three points of immobilization as well as a negative armed output option.

## Operation

One of the transponder tags should be attached to the key ring containing the vehicle's ignition key. It is important that only one tag be attached to the key ring at any given time. The other tag should be kept separately as a spare or attached to the vehicle's spare set of keys.

The immobilizer will automatically search for tags for the first 60 seconds after the driver's door is opened or the ignition is turned on. When a correct transponder tag is recognized, the LED will stop flashing, indicating the immobilizer is disarmed.

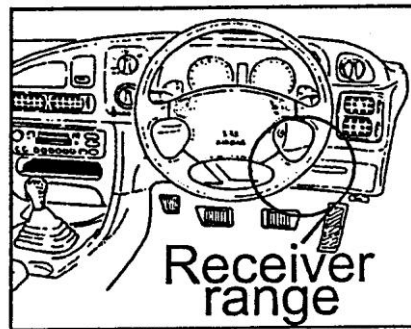

The immobilizer will re-arm automatically 30 seconds after the ignition has been turned off. During the automatic arming period, the LED will flash rapidly. Once armed, it will commence flashing slowly.

The siren will be triggered if a correct tag is not used to disarm the system within 15 seconds after the door is opened or if the ignition is turned on while the system is still armed.

### **Emergency Override**

This immobilizer is equipped with a high security emergency override system. The override is based on a PIN (Personal Identification Number) that must be entered through the ignition switch in the event that a tag is lost. The PIN is entered by following the instructions below. All units when shipped have a different PIN number with a sticker on the services card. A new PIN number is programmable; please see **Changing PIN Number** further in the instructions.

To demonstrate, the override PIN number of 1-2-3-4 will be used. It is important to read and understand the following instruction before beginning the override procedure.

The override is based on a combination of turning the ignition on and off, and counting the flashes from the red LED. If a mistake is made, simply start the procedure again with the first digit.

This procedure assumes the PIN is still 1-2-3-4. Ensure no tag is in range of receiver (ignition key).

	<b>Action</b>	<b>Reaction</b>	<b>Result</b>
1	Turn ignition switch ON	LED steady glow	
2	Turn ignition OFF and count flashes	LED flashes	
3	After <b>ONE</b> flash turn ignition ON	LED steady glow	PIN #1 Entered
4	Turn ignition OFF and count flashes	LED flashes	
5	After <b>TWO</b> flashes turn ignition ON	LED steady glow	PIN #2 Entered
6	Turn ignition OFF and count flashes	LED flashes	
7	After <b>THREE</b> flashes turn ignition ON	LED steady glow	PIN #3 Entered
8	Turn ignition OFF and count flashes	LED flashes	
9	After <b>FOUR</b> flashes turn ignition ON	LED flashes quickly	PIN #4 Entered
10	Leave ignition ON - Immobilizer will override after 15 seconds	LED will extinguish	

The immobilizer will remain overridden until ignition is switched ON and a valid tag is within range of receiver (ignition key); where the LED will flash rapidly as per auto-arming cycle.

### **Programming a New PIN Number**

For this example we will change the PIN from 1-2-3-4 to 4-3-2-1. Ensure no tag is in range of receiver (ignition key).

	<b>Action</b>	<b>Reaction</b>	<b>Result</b>
1	Turn ignition switch On	LED steady glow	
2	Turn ignition OFF and count flashes	LED flashes	
3	After <b>ONE</b> flash turn ignition ON	LED steady glow	PIN #1 Entered
4	Turn ignition OFF and count flashes	LED flashes	
5	After <b>TWO</b> flashes turn ignition ON	LED steady glow	PIN #2 Entered
6	Turn ignition OFF and count flashes	LED flashes	
7	After <b>THREE</b> flashes turn ignition ON	LED steady glow	PIN #3 Entered
8	Turn ignition OFF and count flashes	LED flashes	
9	After <b>FOUR</b> flashes turn ignition ON	LED flashes quickly	PIN #4 Entered
10	Switch ignition OFF before 5 seconds	LED flashes	

At this point, the immobilizer new PIN is ready to be reprogrammed.

11	After <b>FOUR</b> flashes turn ignition ON	LED steady glow	
12	Turn ignition OFF and count flashes	LED flashes	
13	After <b>THREE</b> flashes turn ignition ON	LED steady glow	
14	Turn ignition OFF and count flashes	LED flashes	
15	After <b>TWO</b> flashes turn ignition ON	LED steady glow	

16	Turn ignition OFF and count flashes	LED flashes	
17	After <b>ONE</b> flash turn ignition ON	LED steady glow	
18	Within 5 seconds show valid tag to receiver (ignition switch)	New PIN report	

The immobilizer will now report the newly programmed PIN by flashing each number in sequence, each one separated by a long flash.

19	Leave ignition ON until report finishes to enable new PIN OR Switch ignition OFF prior to finishing report to discard new PIN and re-enable old PIN.		
----	--	--	--

It is important to record the new PIN number for future use. If a mistake is made and the PIN cannot be remembered, enter the PIN 9-9-9-9 and then bring one of the coded tags close to the ignition switch. This will reset the PIN to 1-2-3-4.

### **Programming a New Tag to the System**

This procedure assumes the PIN is still 1-2-3-4. Ensure no tag is in range of receiver (ignition switch).

	<b>Action</b>	<b>Reaction</b>	<b>Result</b>
1	Turn ignition switch On	LED steady glow	
2	Turn ignition OFF and count flashes	LED flashes	
3	After <b>ONE</b> flash turn ignition ON	LED steady glow	PIN #1 Entered
4	Turn ignition OFF and count flashes	LED flashes	
5	After <b>TWO</b> flashes turn ignition ON	LED steady glow	PIN #2 Entered
6	Turn ignition OFF and count flashes	LED flashes	
7	After <b>THREE</b> flashes turn ignition ON	LED steady glow	PIN #3 Entered
8	Turn ignition OFF and count flashes	LED flashes	
9	After <b>FOUR</b> flashes turn ignition ON	LED flashes quickly	PIN #4 Entered

At this point, the immobilizer new tag is ready to be reprogrammed.


10	Within 5 seconds place tag into receiver area (ignition switch)	LED will glow constantly for 2 seconds – Tag is now confirmed	
11	Repeat step 10 for any additional tags		

**NOTE: *The immobilizer contains enough memory to store five tags. When a sixth tag is programmed, the unit will cycle around and overwrite tag #1. This feature is useful when re-programming the system after tags are either lost or stolen.***

12	Once LED is glowing constantly, switch the ignition OFF. The unit is now armed and will respond to the new tag	LED flashes then glows constantly	
----	--	-----------------------------------	--


In the event that both tags are lost and the system is overridden, the immobilizer must be brought out of override before a new transponder can be programmed. Open the driver's door, turn the ignition ON and then bring the new un-coded transponder close to the ignition. Allow 30 seconds for immobilizer to re-arm and begin programming procedure.

# MEGATRONIX TP34 WIRING DIAGRAM

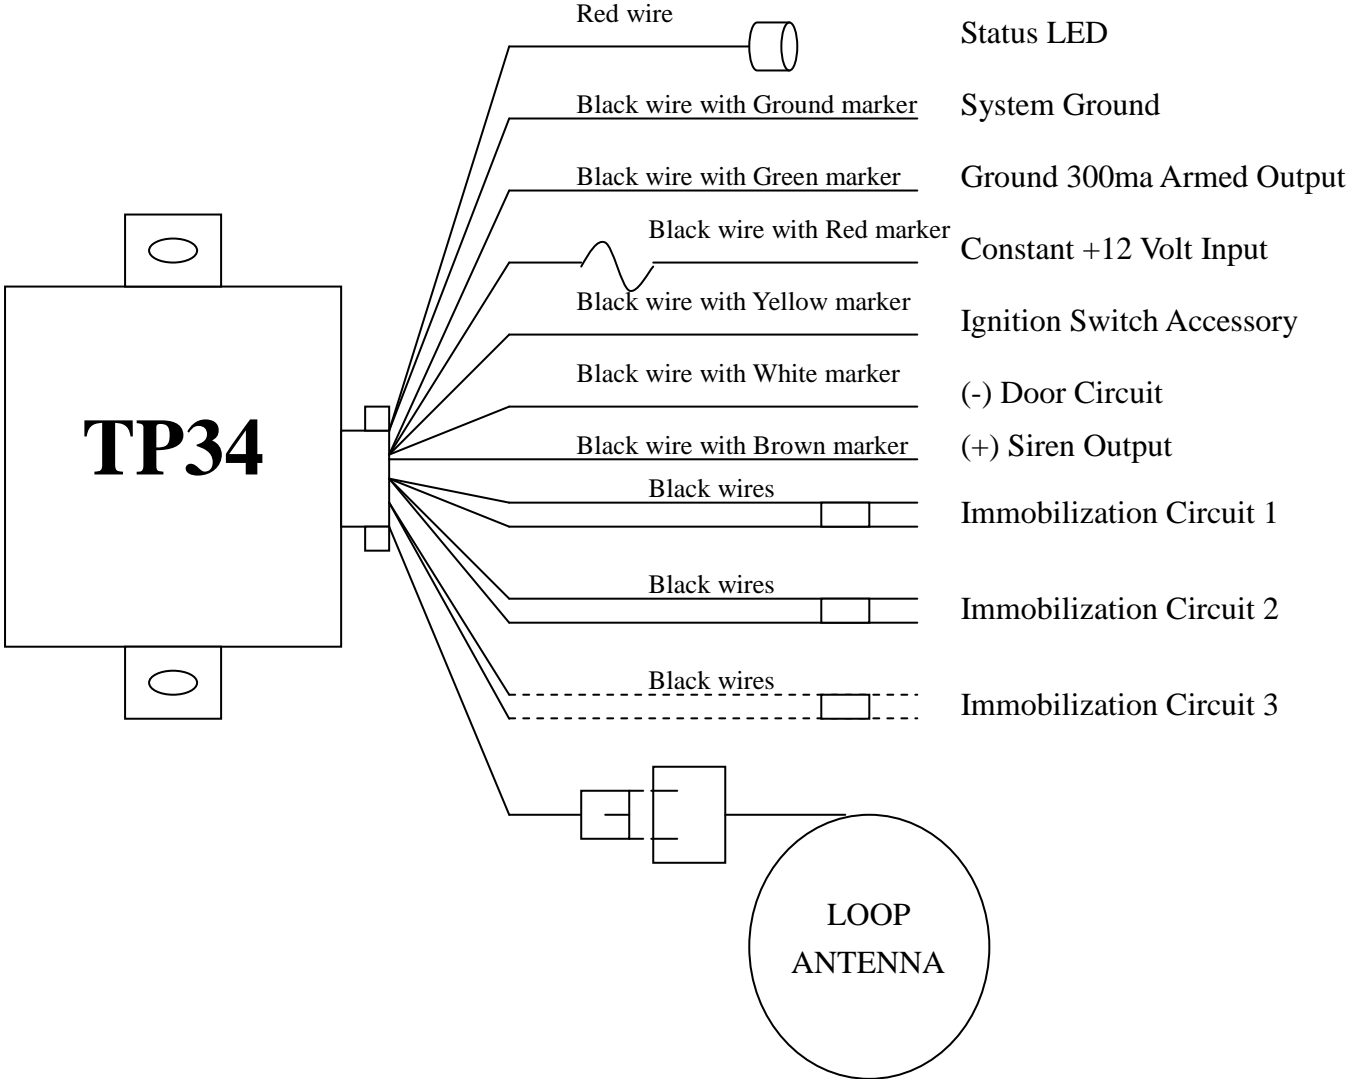


## THE INSTALLATION OF ANTENNA

1. The antenna can be installed in the vicinity position of the ignition lock, but do not place it too close to the ignition's metal parts so as to get better range as shown below:

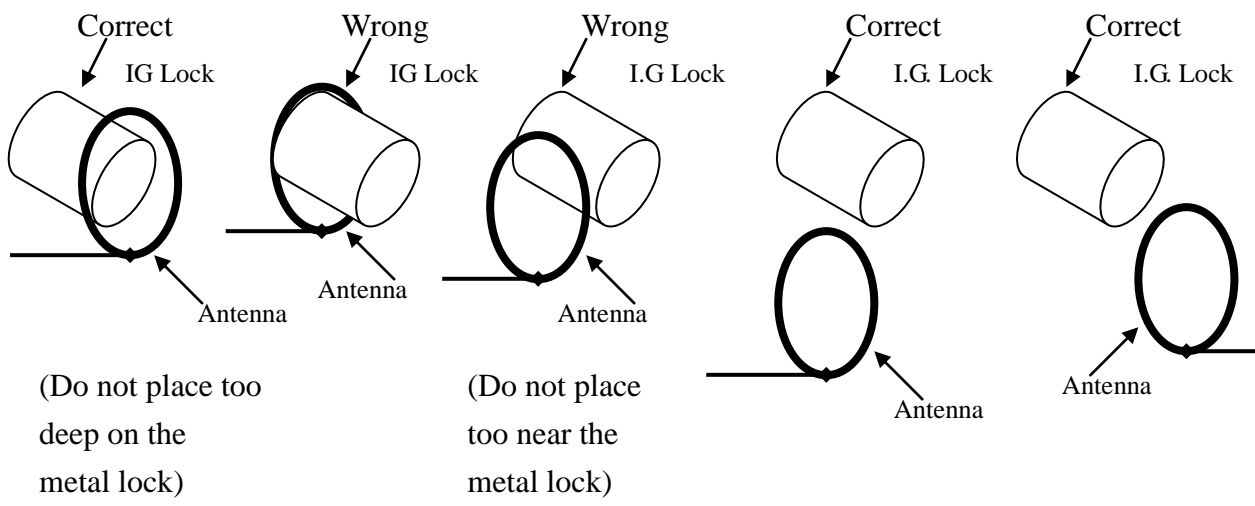

2. The antenna must be installed as an even circular shape. Do not install it bended such as below:

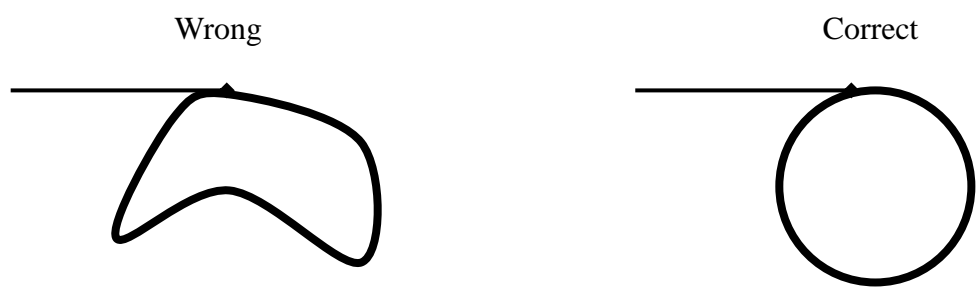

3. Please place the antenna as a 90° angle with the direction of the tag how the user usually approaches the tag's antenna to get maximum range (5 to 6 inches) as below:

Poor Range:  
Just 2 or 3 cm for 0° angle and 7 or 8 cm for 30° angles

Long Range:  
12 to 15 cm for 90° angle

